



C 50/75/100

Multifunction Process Calibrator



User Manual

WD1025
03/05/08 Rev B
Revised 04/22/15

Distributed By:
Temperature & Process Instruments, Inc.
1767 Central Park Ave.
Suite 112
Yonkers, NY 10703
Phone: 914-673-0333
Email: sales@tnp-instruments.com
Web Site: <https://www.tnp-instruments.com>

Wahl Instruments, Inc.
234 Old Weaverville Road
Asheville, NC 28804
Toll Free 800-421-2853
Phone 828-658-3131
Fax 828-658-0728
www.palmerwahl.com

LIMIT OF WARRANTY AND LIABILITY

Manufacturer warrants this product to be free from defects in material or workmanship under normal use and service for a period of 12 months from date of purchase. The Manufacturer agrees to repair or replace any product, which upon examination is revealed to have been defective due to faulty workmanship or material if returned to our factory, transportation charges prepaid, within the above stated warranty period. This warranty is in lieu of all other warranties, expressed or implied and of all obligations or liabilities on its part for damages including but not limited to consequential damages, following the use or misuse of instruments sold by the Manufacturer. No agent is authorized to assume for Manufacturer any liability except as set forth above.

**WARRANTY & CALIBRATION
REGISTRATION at
www.palmerwahl.com/register**

Registration is fast and easy. In about a minute you can have your product automatically registered for Warranty Protection and our Calibration Reminder service. Protect your investment, and maintain product accuracy and compliance with ISO and other quality standards.

Questions? Call Customer Service
at 1-800-421-2853 or 828-658-3131,
Or email: register@palmerwahl.com

Table of contents

C 50/75/100	1
A. GENERAL	5
A.1 INTRODUCTION	6
A.1.1 About this guide	6
A.1.2 Unpacking	6
A.1.3 Returning	6
A.2 MATERIAL	7
A.2.1 General view of the unit	7
A.2.2 Rubber Boot	7
A.2.3 Connection terminals	7
A.2.4 Side connectors	8
A.2.5 Screen	8
A.2.6 Keyboard	9
A.2.7 Batteries and charger	9
A.2.8 Replacing the battery pack	10
A.2.9 Stand	10
A.2.10 Strap	10
A.3 SOFTWARE	11
A.3.1 General Description	11
A.3.2 User Interface	11
A.4 SAFETY	14
A.4.1 Compliance with safety standards	14
A.4.2 Instructions	14
A.4.3 Making measurements	14
A.4.4 Unusual faults and stresses	14
A.4.5 Definitions	14
A.5 SERVICE	15
A.5.1 Software updates	15
A.5.2 Recalibration	16
A.5.3 Cleaning	17
B. GETTING STARTED	18
B.1 POWERING ON	18
B.2 MEASUREMENT	18
B.2.1 Measuring DC voltage	19
B.2.2 Measuring current	20
B.2.3 Measuring resistance	21
B.2.4 Continuity test	22
B.2.5 Measuring frequency	22
B.2.6 Measuring frequency of dry contact	23
B.2.7 Pulse counting	23
B.2.8 Resistive temperature probes (Temperature)	24
B.2.9 Measurement by Thermocouple (Temperature)	25
B.2.10 Pressure measurement	25
B.2.11 Pressure measurement and detection of contact opening	26
B.3 GENERATION/SIMULATION	27
B.3.1 Generating a DC voltage	27
B.3.2 Current generation	28
B.3.3 Resistance simulation	29
B.3.4 Resistive probe simulation (temperature)	29
B.3.5 Thermocouple simulation (temperature)	30
B.3.6 Frequency generation	30
B.3.7 Frequency generation for hard contact	30
B.3.8 Pulse generation	31
C. ADVANCED OPERATION	33
C.1 SIMULATION MODES	33
C.1.1 Manual Edit Mode	33
C.1.2 Incremental Edit Mode	33
C.1.3 Predefined Settings Mode	34
C.1.4 Staircase mode	35
C.1.5 Simple Ramp Mode	36
C.1.6 Cyclic Ramp Mode	37
C.1.7 Synthesizer Mode	37
C.1.8 Transmitter Mode	39
C.2 SCALING	39
C.3 DIFFERENTIAL MEASUREMENTS	40
C.4 CALIBRATED SENSORS	41
C.5 CALIBRATION PROCEDURE	43
C.6 STORING THE CURRENT ACQUISITIONS	46
C.7 CONFIGURATIONS	49
C.8 SETTING PARAMETERS	50
C.8.1 Adjustment of contrast	50
C.8.2 Date and Time	51
C.8.3 Preferences	51
D. TECHNICAL SPECIFICATIONS	52
D.1 MEASUREMENT FUNCTION	52
D.1.1 DC Voltage (C 50/75)	52
D.1.2 DC Current (C 50/75)	52
D.1.3 Resistance (C 50/75)	52
D.1.4 Temperature by thermocouples (C 50/75)	52
D.1.5 Temperature using resistive probes (C 50/75)	53
D.1.6 Frequency and counting (C 50/75/100)	53
D.1.7 DC Voltage (C 100)	53
D.1.8 DC Current (C 100)	53
D.1.9 Resistance (C 100)	54
D.1.10 Temperature by thermocouples (C 100)	54
D.1.11 Temperature using resistive probes (C 100)	54
D.1.12 Additional characteristics in "measurement" (C 50/75/100)	55
D.2 "TRANSMISSION/SIMULATION" FUNCTION	55

D.2.1	DC Voltage (C 50/75)	55
D.2.2	DC Current (C 50/75)	55
D.2.3	Resistance (C 50/75)	55
D.2.4	Temperature by thermocouples (C 50/75)	55
D.2.5	Temperature by resistive probes (C 50/75)	56
D.2.6	Frequency and pulses (C 50/75/100)	56
D.2.7	DC Voltage (C 100)	56
D.2.8	DC Current (C 100)	57
D.2.9	Resistance (C 100)	57
D.2.10	Temperature by thermocouples (C 100)	57
D.2.11	Temperature by resistive probes (C 100)	57
D.2.12	Additional characteristics in simulation (C 50/75/100)	58

A. GENERAL



Thank you for choosing this Wahl Instruments High Accuracy calibrator. Wahl has been providing high quality, high accuracy measuring instruments for over 50 years.

Because of this, we are able to continue our policy of continuous innovation, which has served our customers so well for the last 50 years. Wahl Instruments encourages your comments and would willingly accept any suggestions from you to help us to perfect our know-how and improve our future products.

A.1 Introduction

The C 50/75/100 is a multifunction calibrator. It is specially designed for calibration and maintenance and can measure and simulate physical and electrical quantities, either on site or in the laboratory.

It can perform all the following functions:

- Measure DC voltage and current, resistance and frequency/ pulses and pressure.
- Measure temperatures using thermocouples and resistive probes.
- Supply power and measure a current loop which is compatible with the HART® protocol.
- Generate DC voltages and currents.
- Simulate resistance, thermocouples and resistive probes.
- Recording of measurements and their display as a table or trend curve (function only available for models C 75 and C 100).
- Calibration and generation of the calibration report (function only available for models C 75 and C 100).
- Possibility of using calibrated sensors with memorization of the calibration factors

Measurement and transmission can take place simultaneously, with a dual display.

The C 50/75/100 has many associated functions that extend its range of application:

- Relative measurement.
- Results displayed based on a linear or other conversion law.
- Generation of increments and simple or cyclic ramps.
- Synthesis of curves.

A number of improvements have provided it with:

- Rapid access to all its functions.
- Intuitive user interface.
- Advanced on-line help system.
- Multi-functions keys defined step-by-step on the display.
- Connections which can be made with 4 mm safety plugs.
- Protection against overloads.
- Powered by a rechargeable battery with rapid internal charger.

The unit is enclosed in an ABS case with rubber boot.

A.1.1 About this guide

This user guide consists of four parts: A, B, C and D.

Part A contains general information and a description of the hardware and software of the unit. It also contains a paragraph on safety and user precautions.

Part B contains brief handling information and a description of the various modes of operation.

Part C contains a description of the advanced functions.

Part D contains the technical specifications of the C 50/75/100.

A.1.2 Unpacking

All C 50/75/100 units are mechanically and electrically checked before delivery. The necessary precautions have been taken to ensure that they reach the user undamaged.

However, it is a good idea to make a brief check for any damage that may have occurred during transportation. If this is the case, make an immediate claim against the carrier.

The following accessories are standard:

- This user guide
- Mains unit for charging the battery pack
- 6 measurement cables
- Mounting strap

A.1.3 Returning

Please use the Product Return Request form on our website, or contact Customer Service at (800) 421-2853, for a Return Merchandise Authorization number (RMA) before returning your instrument to the factory. You can find the Product Return Request form under the Service button at www.palmerwahl.com

You will be contacted with your RMA number and directions for returning your product.

If the unit is to be returned, it is preferable to use the original packaging.



Warning


The packaging supplied with the calibrator can withstand a maximum pressure of 20 bar at 21°C (290 psi at 70°F). Subjecting the package to a higher pressure risks damaging the unit.

A.2 Material

General characteristics:


- Portable unit powered by a pack of Ni-MH, 1.8 Ah rechargeable batteries.
- Battery life: 5 to 10 hours, depending on the functions used.
- Stand for benchtop use.
- Strap for carrying and on-site use.
- 240 x 320 pixel liquid crystal graphical display.
- Choice of language for messages and programming the functions, settings and parameters using a keyboard with 22 keys.
- Back-lit display controllable from a key on the keyboard, with automatic switch-off after a programmable time of inactivity.
- Battery charging: mains adaptor supplied with the unit or from any 10 to 14 VDC power supply.
- Adaptor characteristics: mains voltage 120 V \pm 10%, 50/60 Hz.
- Charging time: 3 h max.
- Case: ABS case with rubber boot.
- Dimensions: 210 mm x 110 mm x 50 mm.
- Weight: 900 g with boot and accessories
- Waterproof to IP 54 in accordance with standard EN 60529

A.2.1 General view of the unit

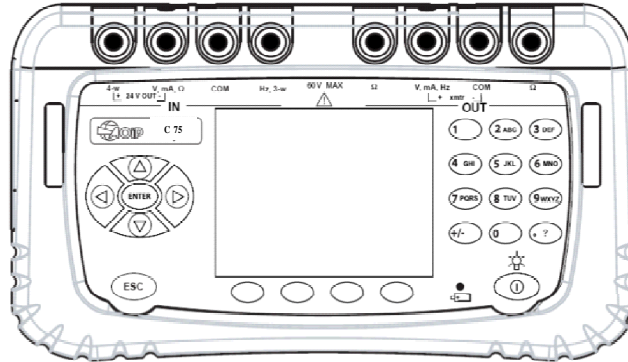


A.2.2 Rubber Boot

The C 50/75/100 is delivered with a rubber boot fitted to the case. The boot protects the unit from mechanical shocks and makes the side openings for the USB interface connector and the charger connector waterproof to IP54.

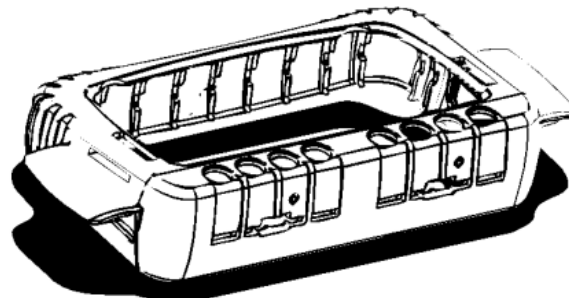


A.2.3 Connection terminals

Four terminals for connection for the "measurement" function (IN); two of which are reserved for 3 or 4 wire connection when measuring resistance, temperature with a resistive probe and current for a passive transmitter. Refer to paragraph B.2.
 Four connection terminals for the "transmit/simulate" function (OUT). Refer to paragraph

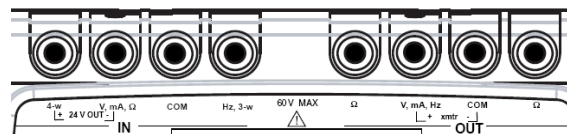


The 8 terminals of the C 50/75/100 are of the "push & lock" type. They accept 4 mm banana plugs, bare wires, spade terminals and miniature connectors for thermocouples.

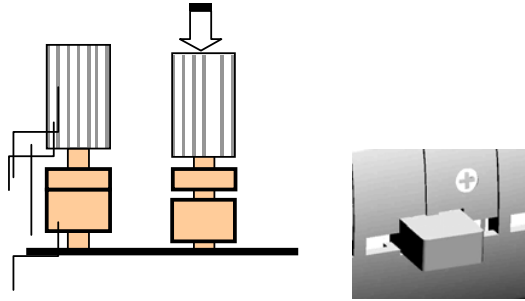


A.2.4 Side connectors

- There are two connectors on the left hand side of the unit.
- The first is a mains unit connector for battery charging.
 - The second is a type B USB socket for connection to a computer.

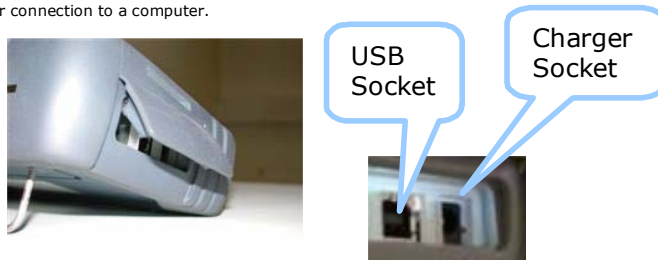


The connector for the pressure sensor is located on the right-hand side of the unit (function only available for models C 75 and C 100).

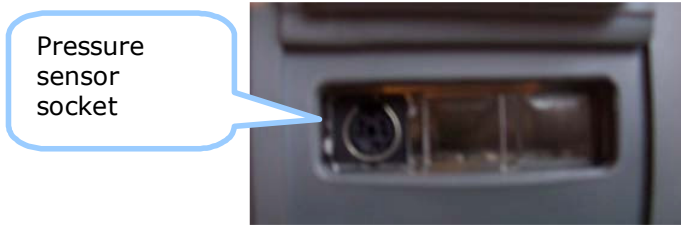


A.2.5 Screen

The C 50/75/100 is fitted with an LCD graphical display which is backlit with white LEDs. The resolution of the display is 240 x 320 pixels. When the unit is in use, the screen comprises:

- A window displaying the programming of the "measurement" function parameters (IN). Refer to paragraph B.2.
- A window displaying the programming of the parameters of the "transmission/simulation" function (OUT). Refer to paragraph.
- A strip showing the various menus accessible by touch keys directly on the screen.

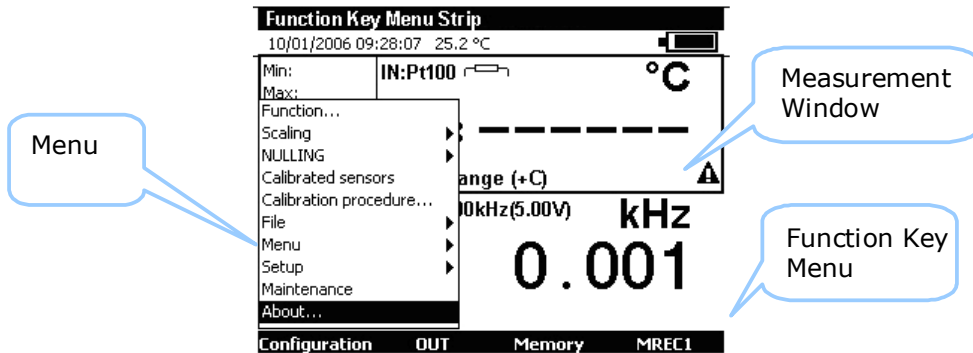

A.2.6 Keyboard

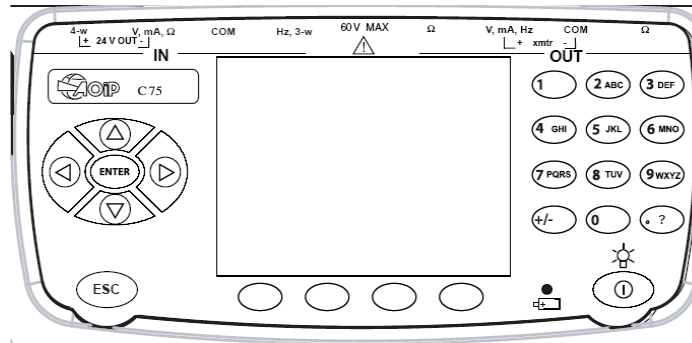


The keyboard contains:

- 4 blank function keys to select the various menus shown on the screen. Note: for the purposes of this manual, the buttons are referred to as F1, F2, F3 and F4 but are not labeled on the unit.



- A navigator:

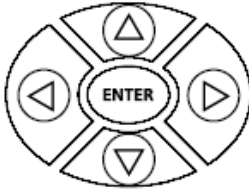


- A cancel key:



- A Start/stop key for the unit and back-lighting on/off key:



- A short push switches the unit on. During operation, a short push switches the back-lighting on or off. A long push of 2 seconds switches the unit off.
- 12 alphanumeric keys for programming the parameters.

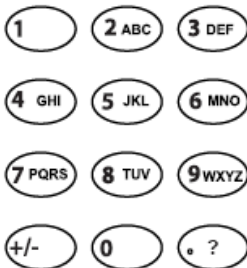

- AN LED to indicate the state of charge of the battery:






A.2.7 Batteries and charger

Precautions to be taken if battery charge is low:

After receiving your C 50/75/100 it is possible that the batteries are not sufficiently charged for optimum operation or even for starting up the device.

It is therefore required to connect the device to the mains (see paragraph A.2.4) and to wait for a few minutes before starting it up (by pressing the On/Off button).

During normal operation:

When the  symbol flashes on the display, the battery should be recharged at the earliest convenience. Connect the charger to the network, the charge indicator (red LED)  on the front panel lights up. Leave the charger switched on for about 3 hours for a complete recharge and disconnect the charger when the charge indicator  goes off on the front panel.

Precautions to be taken to improve the service life of your batteries:

The battery technology (NiMH: nickel-metal hydride) used in your C 50/75/100 provides greater autonomy, however this technology requires strict maintenance, requiring discharge cycles to avoid "memory effect". Any nickel-based battery should be fully discharged once a month. If such maintenance is not performed, a loss of capacity can be seen that can amount to a third of the capacity. Complete restoration then becomes more difficult if such regular maintenance is ignored.

The calibrator should be powered off for charging if not in use.

The internal charging circuit does not provide operating power for the unit. It is only for charging the battery. If the unit is left on, once the unit becomes fully charged it will stop the charging voltage and run off the battery until the battery again requires charging. Therefore, if the unit has been left on during the charging cycle, it is possible to have only a partial, or even a low charge, when it is disconnected for use.

The unit will still stop charging once the battery is fully charged, but if the unit is off it will not place a drain on the battery until it is turned on.

If the battery charge is too low, and the unit is being powered on, it may only flash the "Wahl" start-up screen, or even cause a system lock up. In either case plug the charger into the unit and allow a couple of minutes for normal operation to restore. If the unit is still locked up try depressing the "ESC" button and the Power button at the same time for about 15-20 seconds. This should cause a system reset and return to normal operation.

If the above symptoms continue after the battery has had a proper full charge cycle (minimum 3-4 hours while powered off) it may indicate a depleted battery pack requiring replacement.



Warning

ONLY USE THE MAINS ADAPTOR SUPPLIED WITH THE CALIBRATOR.

The charger can be used with voltages of between 100 VAC and 250 VAC.


The charger is for indoor use only, at an ambient temperature not exceeding 40°C (104°F).

A.2.8 Replacing the battery pack

To replace the battery pack, contact your dealer.

A.2.9 Stand

The stand gives a good angle of view when the C 50/75/100 is placed on benchtop. Unfold the stand on the back of the unit and place the C 50/75/100 on a desk as shown below.

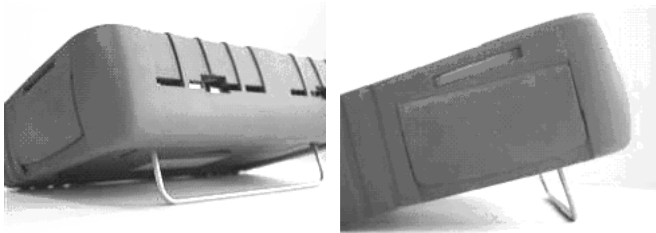

A.2.10 Strap

The C 50/75/100 is supplied with a durable nylon strap and two pins to attach the strap to the case. Before attaching the strap, pass the free end through the fixing loop as in the diagram.

Feed the ends of the strap through the two slots on each side of the case. Insert the two pins into the strap and pull the strap to lock the pins in the case.




A.3 Software

The firmware of the C 50/75/100 is stored in flash memory. It is therefore relatively easy to update the firmware when a new version is available. Refer to paragraph A.5.1 for detailed information on updating the firmware.

A.3.1 General Description

The diagram below briefly describes the functions of the firmware.

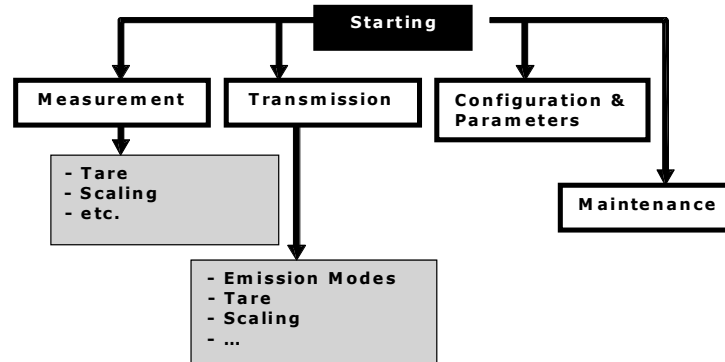




The Start procedure checks that the unit is working correctly and initializes the various tasks that are continuously executed during operation of the C 50/75/100. The Measurement task is responsible for the configuration, post-processing and display of measurements. The Transmission task handles the various modes of simulation, pre-processing of settings and the display. Several tasks are dedicated to setting parameters and configuration management. The maintenance task is responsible for calibration and initialization of the unit.

A real time operating system coordinates the various tasks and manages the keyboard and USB peripherals.

A.3.2 User Interface

The basic items forming the user interface are shown in the diagram below:

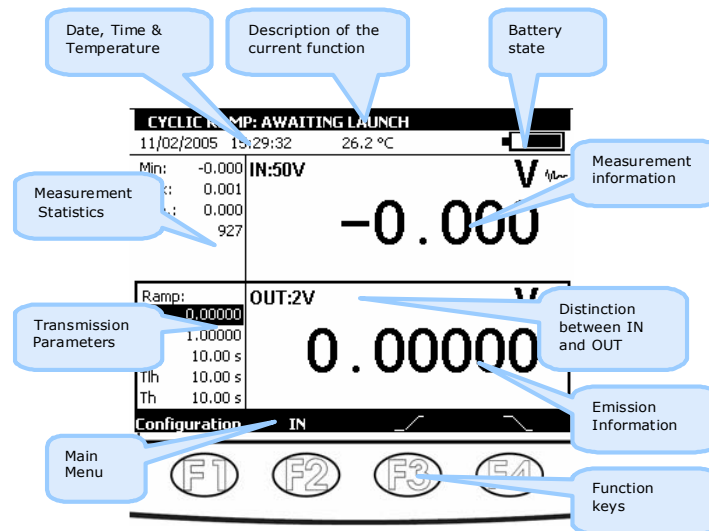



The "on-line help" function is not visible in the menu, but is accessible at any time by pressing the  key. When active, a help window for the function in use appears. The  key closes the help window and all the dialog boxes displayed.


The main menu is located at the bottom of the screen, opposite the four function keys (F1 to F4). To select an item from the menu, press the associated function key.

Navigation within menus and sub-menus is by means of the navigation keys and the ENTER key.



For example, to display the **FS** menu in the example of the screen below, perform the following steps:


- 1) Press the F4 key associated with the proposed **Mode** from the main menu.
- 2) Press the Down  navigation key twice to select the **Predefined settings** sub-menu and confirm with the ENTER key.
- 3) Press the Down navigation key  once to select the **FS** sub-menu and confirm with the ENTER key. A dialog box associated with this function appears and the four function keys change their function automatically to suit the dialog box.

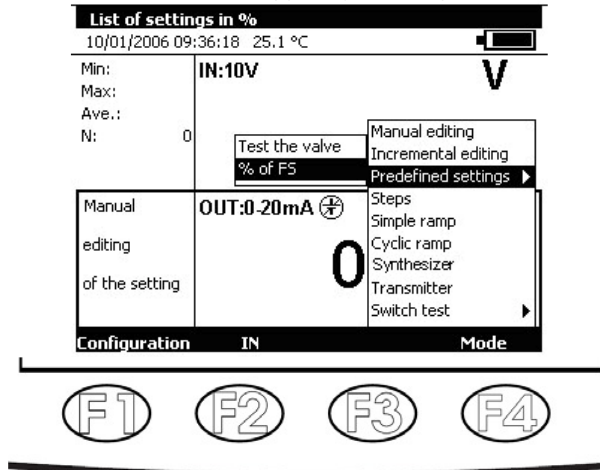
It is possible to cancel the selection at any time and return to the main menu by pressing the ESC key.









The dialog box interface is intuitive. It is managed by the function and navigation keys.

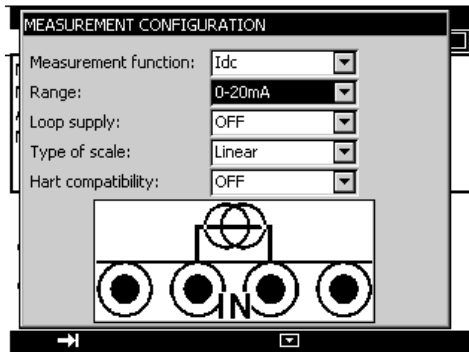
The tabulation key  is used to select the next item from all the items in the dialog box. For example, to select the "Type of scale" field on the following screen, press the  key once.




The tabulation key  functions cyclically, so that the first item follows the last.

The Right  navigation key can replace the  tabulation key.

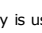The  function key is used to display a drop-down list. The  key also closes an already open drop-down list. The Up  and Down  navigation keys are used to select an item from an open list. Confirm by pressing the ENTER key.

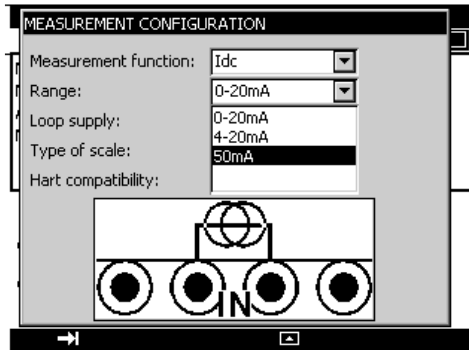

A quicker way to select items from a drop-down list is by using the Up/Down navigation keys to select the next/previous item from the list without displaying the contents of the list. For example, the state of the "Power supply loop" field can be changed from OFF to ON using the Down and Up navigation keys.

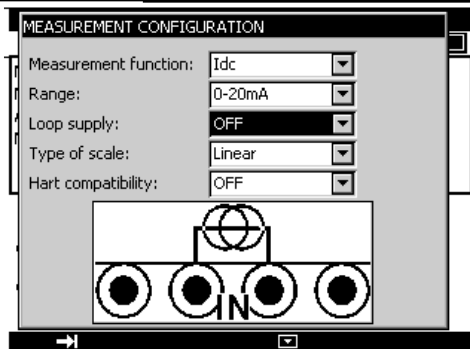

During operation of the C 50/75/100, several symbols are displayed to simplify selection and indication of the current functions. These symbols are shown in the table below:

Symbol	Description
Function keys	
	Tabulation key
	Open a drop-down list
	Close a drop-down list
	Cancel the selected item
	Stop the current transmission
	Suspend the current transmission
	Commence or resume transmission
	Launch transmission in the increasing direction
	Launch transmission in the decreasing direction
	Transmit synthesized points in the order entered
	Transmit synthesized points in the reverse order
	Cancel the selection
	Add the item being edited
	Edit the selected item
	Open a file
Indication symbols	
	Maintain transmission or display of measurements
	Indication of battery state
	HART compatibility is on
	Loop power supply is on
	Loop power supply is off
	Square law scale is on
	Warning: Out of Range or error
	2 wire cabling detected
	3 wire cabling detected
	4 wire cabling detected
	Transmission in incremental mode
	Transmission in staircase mode
	Transmission in simple ramp mode
	Transmission in cyclic ramp mode
	Transmission in Synthesizer mode
	Transmission in % of Full Scale mode (% FS)
	Transmission in valve test mode
	Item already selected
	Measurement smoothing is active
	The Tare function is on
	Setting to scale is on
	Pulse transmission
	Acquisition in progress (the value to the right of the pictogram indicates the number of values logged)

A.4 Safety**A.4.1 Compliance with safety standards**

The unit is built and tested in accordance with European standard EN 61010-1: safety rules for electronic measuring equipment.

These user instructions contain information and warning notices which must be respected by the user for protection against danger from electric currents, ensuring correct operation of the unit and protection against any false step that could damage the unit or make it unsafe to use.

The unit may, when necessary, be subjected to temperatures of between -10°C and +55°C without compromising safety.

A.4.2 Instructions

The unit is designed to be used in complete safety if the instructions given in the accompanying documents are followed. Any use apart from those defined, may compromise the safety of the operator and is therefore not recommended.

A.4.3 Making measurements

Test leads must be in good condition and must be replaced if their insulation appears defective (insulation cut, burned, etc.).

When the unit is connected to the measurement circuit, the terminals may be dangerous. Also, never place your hands near a terminal, whether in use or not. This advice also applies to the battery charger sockets and the USB link connected directly or indirectly to the terminals of the unit. Any work on these circuits must be carried out with the unit disconnected from any other external circuit.

Never exceed the limiting values of protection indicated in the specifications. Refer to chapter D.

When the order of magnitude of the value to be measured is unknown, make sure that the starting measurement range is the highest possible, or choose the automatic range selection mode.

Before changing the function, disconnect the wires for measuring the external circuit. When measuring current and/or voltage, even if low, remember that the circuits may be live with respect to earth, at a voltage that is dangerous for the operator.

Never carry out resistance measurements on a live circuit.

A.4.4 Unusual faults and stresses

Whenever it is believed that the protection has been damaged, switch off the unit and ensure that it is not used prematurely.

The protection may have been damaged if, for example:




- ⚠ There is obvious damage to the unit.
- ⚠ The unit is no longer able to make accurate measurements.
- ⚠ The unit has been stored under unfavorable conditions.
- ⚠ The unit has been subjected to severe stress during transportation.

A.4.5 Definitions**A.4.5.1 Definition of the installation category**

This is also known as the overvoltage category.

It is the classification of the installation according to standard limits for transient overvoltages (standard CEI 664).

A.4.5.2 Table of symbols used

Symbol	Description
	Warning: see accompanying documents
	Earth point
	Complies with European Union directives

A.5 Service

The unit must always be set up according to the instructions in this notice. Incomplete or poorly executed setting up may adversely affect the safety of the operator.


The responsible authority must ensure on a regular basis that factors affecting safety do not change with time and carry out any necessary preventive work.

Before opening the unit for any work, you must ensure that all wires are disconnected from the unit

Any adjustment, maintenance or repair of an open unit must be avoided as far as possible and, if essential, must be carried out by qualified personnel who are familiar with the risks involved.

A.5.1 Software updates


The software is updated by a special program from Wahl Instruments available upon request. To find out which version of firmware is installed in your unit, use the **Configuration** → **About** menu.

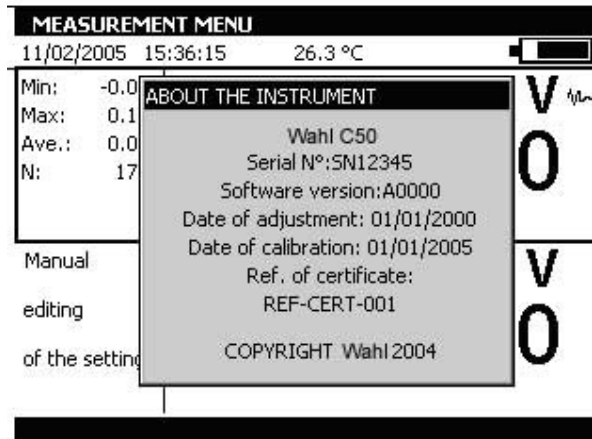


To find out if an update is available please contact Wahl Instruments Customer Service at 800-421-2853.

To update the firmware, proceed as follows:

1. Download a new version of the firmware.
2. Disconnect the leads connected to the measurement and simulation terminals.
3. Connect the instrument to the PC using the USB lead supplied with the product.
4. Launch on your PC the UPG32 program supplied by Wahl Instruments.
Select the language then the file containing the firmware and download in the first stage..

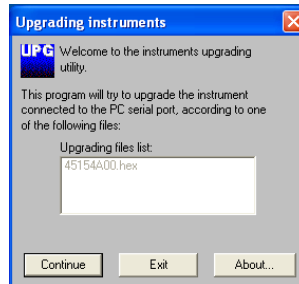

6. Choose the communication parameters that match the parameters of the C 50/75/100. The communication port used is a virtual port which does not correspond to a physical port on your computer. The other parameters to be selected are defined in the diagram below.

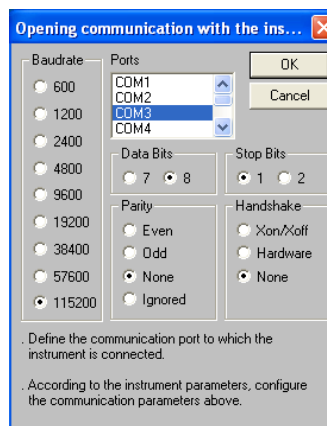

7. Confirm the update by pressing "OK" and wait for the firmware to load into the unit.

A.5.2 Recalibration

In order to maintain the quality of measurement, the user may wish to carry out a periodical performance check himself.

This check must take into account the metrological precautions for use. The following instructions must be followed.

The operations must be carried out under the reference conditions, namely:


- Ambient temperature: $23^{\circ}\text{C} \pm 1^{\circ}\text{C}$.
- Relative humidity: 45% to 75%.

The standards used in the test process must be such that the errors at the test points are known and are less than or equal to $\pm 0.005\%$.


After these checks, if it is found that one or more of the characteristics of the unit are outside the tolerances given in chapter D, one may:

- Either make an adjustment in accordance with the procedure explained below, which requires equipment at least as accurate as that used for the test previously performed.
- Or return the unit to the address shown at the start of this guide for checking and adjustment.

It is possible to adjust the C 50/75/100 using an instrument whose accuracy is better than 50 ppm. To adjust the unit, select the **Configuration** \rightarrow **Maintenance** menus, then enter the password 9456.

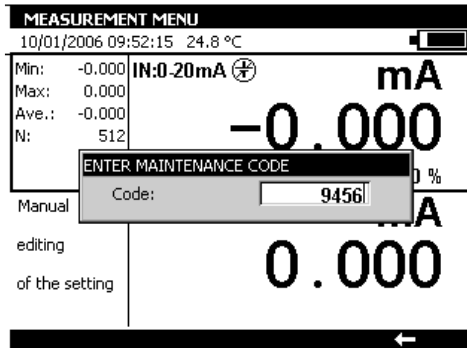


To exit the Maintenance mode, press the **End** function key.

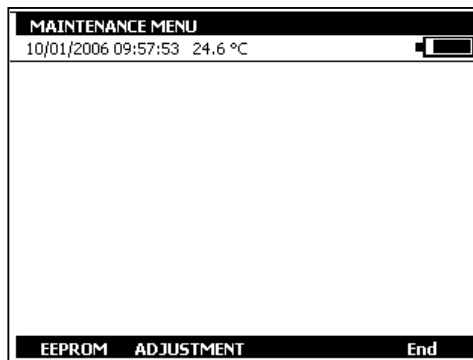

To adjust the C 50/75/100, use the **ADJUST** function key. Make adjustments in the following order:

- Measurement
- Auto-Adjust
- Ohms Offsets
- Transmission
- Date of calibration

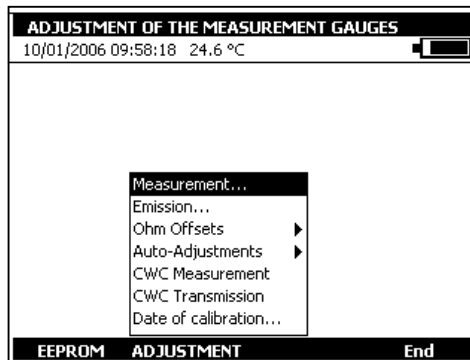

For each type of calibration, select the function to be calibrated with the Up and Down navigation keys and follow the instructions shown in the dialog boxes.

MAINTENANCE MENU				
10/01/2006 09:58:45 24.6 °C				
ADJUSTMENT: Range selection				
Range:	Gain:	Offset:	N:	Date:
100mV	1.037555	0.007061	3	--/--/----
1V	1.024682	0.000011	1	01/09/2005
10V	1.037600	0.000442	1	01/09/2005
50V	1.024661	0.000612	1	01/09/2005
50mA	1.098316	0.002622	1	01/09/2005
400Ω 4 wires	0.978301	0.015511	1	01/09/2005
4000Ω 4 wires	0.966118	-0.041845	1	01/09/2005
400Ω 2 wires	0.978305	-0.007085	1	01/09/2005
4000Ω 2 wires	0.966118	-0.041845	1	01/09/2005

To change the date of calibration and enter the reference of any calibration certificate, use the **ADJUST** → **Date of calibration** menus.

MAINTENANCE MENU	
10/01/2006 10:00:17 24.6 °C	
Calibration information	
Day	<input type="text" value="1"/>
Month	<input type="text" value="January"/>
Year	<input type="text" value="2005"/>
Ref. of certificate:	<input type="text" value="XXXXXXXXXX"/>

A.5.3 Cleaning


If the C 50/75/100 needs cleaning, use a tissue soaked in a non-solvent cleaning solution. Switch off the unit and wipe the boot and keyboard if necessary. If any liquid enters the unit it may cause irreparable damage.


B. GETTING STARTED

In order to use the unit in complete safety, users must carefully read paragraph **A.1** (page 20) which, among other things, deals with safety before handling. It is advisable also to read the following paragraphs:


- A.1.2 Unpacking (page 6)
- A.2.7 Batteries and charger (page 12)
- A.5.3 Cleaning (page 26)

B.1 Powering on

Connect the charger if this is the first time of use. The red LED  lights while the battery pack is charging. Wait until fully charged (LED off) before switching on the

unit by pressing the Start/stop key  for one second.


After starting, the C 50/75/100 is set by default to voltage measurement and voltage transmission. Connect the Volts output to the Volts input as shown in the diagram below.

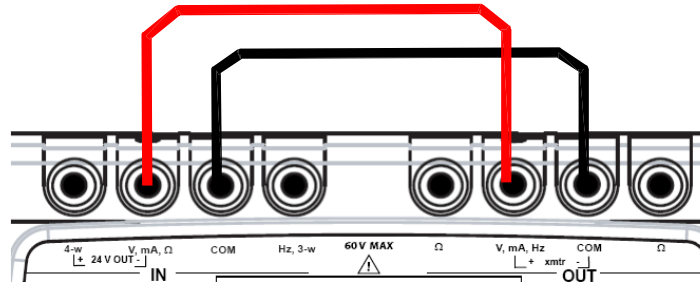


Check that the measurement displayed is the same as the simulated voltage. To change the value of the simulated voltage, open the transmission window by pressing the OUT function key (F2). Enter a numerical value using the alpha-numeric keys and confirm with the ENTER key.

B.2 Measurement


For all measurement functions, open the measurement window with function key **F2** (IN). A rectangle surrounds the top window on the screen.

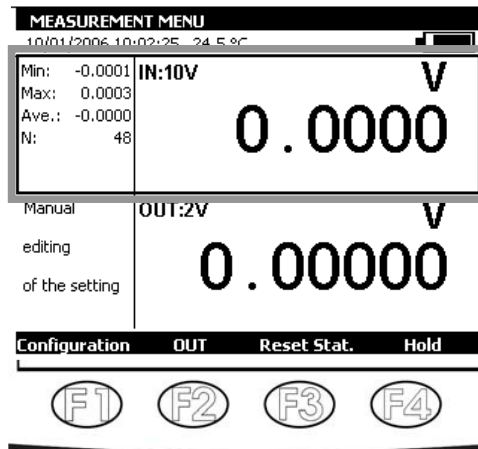

To choose a measurement function, press key **F1** (configuration). Select the **Function ...** menu with the navigation keys and confirm with the ENTER key.

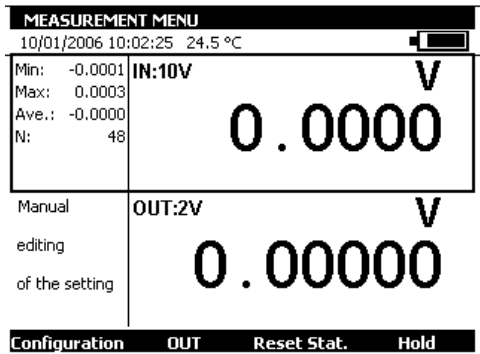


The **MEASUREMENT CONFIGURATION** dialog box is displayed.

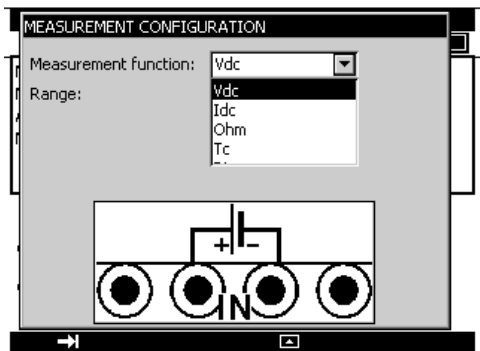

Connections in the measurement mode are made to the four "IN" terminals on the left half of the unit:

B.2.1 Measuring DC voltage

- Display the **MEASUREMENT CONFIGURATION** dialog box:
- Select the **Vdc** measurement function then the correct measurement range using the function and navigation keys.
- Confirm with ENTER.

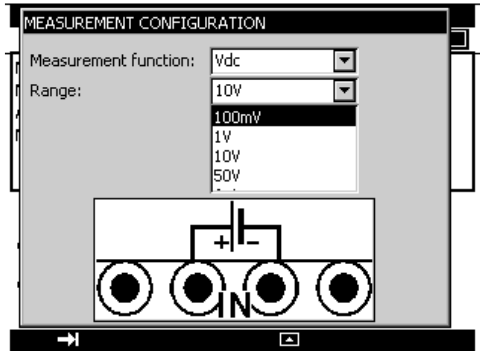

The following ranges are available:

Range	100 mV	1 V	10 V	50 V	Auto
Resolution	1 μ V	10 μ V	100 μ V	1 mV	---
Input impedance	> 10 k Ω	> 10 k Ω	1 M Ω	1 M Ω	---

The DC voltage to be measured is connected between the V and COM terminals.


B.2.2 Measuring current

- Display the **MEASUREMENT CONFIGURATION** dialog box:
- Select the **Idc** measurement function then the correct range of measurement using the function and navigation keys.
- Confirm with ENTER.

Depending on the range selected, several modes of measurement are available:


Range	50 mA	4-20 mA	0-20 mA
Resolution	1 μ A	1 μ A	1 μ A
Input impedance	<30 Ω	<30 Ω <280 Ω if HART ON	<30 Ω <280 Ω if HART ON
Loop power supply	No	Possible	Possible
Set to scale	No	Linear or square law	Linear or square law

If loop power supply is on, the connection is made between terminals 4-w and mA.

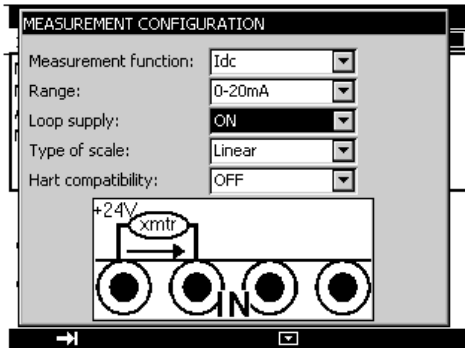

In this case, the C 50/75/100 supplies a passive transmitter with 24 V and at the same time measures the current established by the transmitter.

If the loop power supply is off, the connection is made between terminals mA and COM.

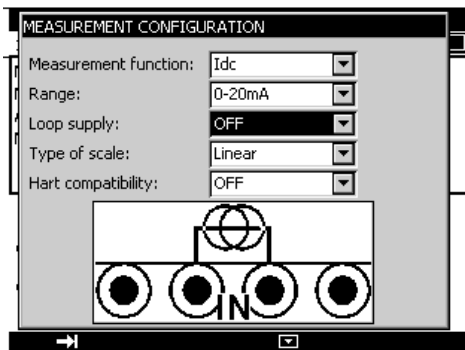


When set to the square law scale, the calibrator takes the square root of the input and displays the result as a percentage. For example, if the calibrator is connected to the output of a differential pressure transmitter, it displays a result proportional to the flow rate.


If the input current x varies between a and b , the scale is set according to the formula:

$$y = a + (b - a) \sqrt{\frac{(x - a)}{(b - a)}}$$





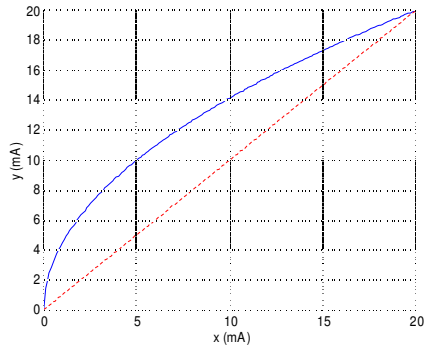In the case of the 0-20 mA range, the scale curve is as follows:



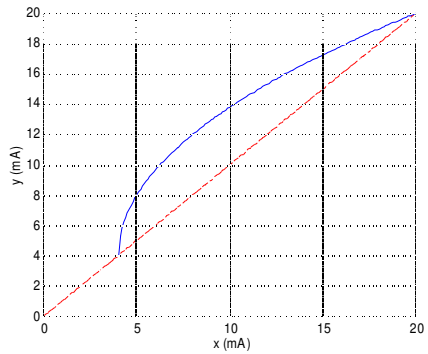


In the case of the 4-20 mA range, the scale curve is as follows:



The C 50/75/100 displays in the window details of the selected configuration using the following icons:


-  : to show loop power supply off
-  : to show loop power supply on
-  : to show square law scale
-  : to show HART compatibility.

MEASUREMENT MENU	
10/01/2006 10:45:24 25.2 °C	
Min: -0.000	IN:0-20mA    mA
Max: 0.000	0.000
Ave.: -0.000	
N: 218	
Manual	OUT:2V V
editing	0.00000
of the setting	
Configuration	OUT Reset Stat. Hold

When the values measured are near the lower limit of the range (0 mA or 4 mA) a small variation in the values measured translates into a more significant variation for the converted values (in %) because of the square law nature of the scaling.

B.2.3 Measuring resistance




- Display the **MEASUREMENT CONFIGURATION** dialog box:
- Select the **Ohm** measurement function then the correct measurement range using the function and navigation keys.
- Confirm with ENTER.

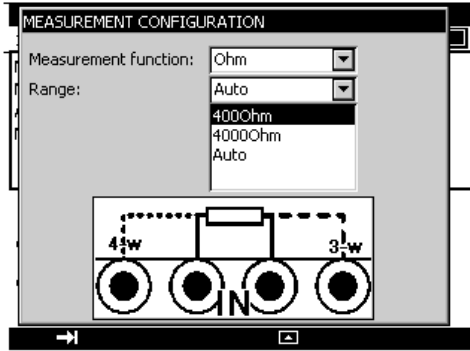

The following ranges are available:


Range	400 Ohm	4000 Ohm	Auto
Resolution	1 mOhm	10 mOhm	--
Measurement current	0.25 mA	0.25 mA	0.25 mA

To carry out a correct resistance measurement with 3 wires, the 3 conductors used must be:
 • of the same length,
 • of the same diameter,
 • of the same type of metal.


The C 50/75/100 displays an icon showing the connections used ( for 2 wire,  for 3 wire or  4 wire) to make the measurement. The wiring arrangement is automatically detected by the calibrator.

B.2.4 Continuity test

- Display the **MEASUREMENT CONFIGURATION** dialog box:
- Select the **Continuity** measurement function using the function and navigation keys.
- Confirm with ENTER.

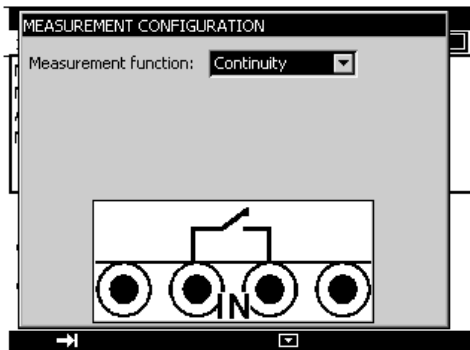


The C 50/75/100 makes a resistance measurement in this mode and displays "open" if the resistance measured is greater than 1000 Ohm and "closed" if the resistance measured is less than 1000 Ohm.

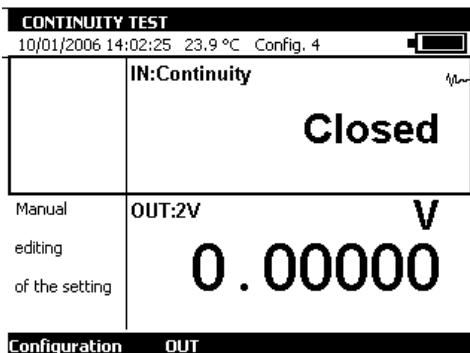

B.2.5 Measuring frequency


- Display the **MEASUREMENT CONFIGURATION** dialog box:
- Select the **Frequency** measurement function, then the "type of input" **Signal** using the function and navigation keys.
- Confirm with ENTER

Connection is made between the Hz and COM terminals.
 The display unit may be in Hz or in beats per minute (BPM).
 The measurement resolution is 0.01 Hz.
 The input voltage of periodic signals must not exceed 60 Volts peak to peak.

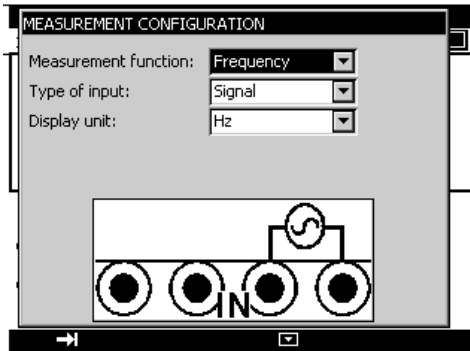

B.2.6 Measuring frequency of dry contact


- Display the **MEASUREMENT CONFIGURATION** dialog box:
- Select the **Frequency** measurement function, then the "type of input" **Dry Contact** using the function and navigation keys.
- Confirm with ENTER.

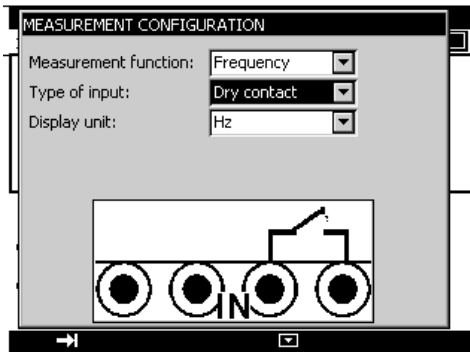


Connection is made between the Hz and COM terminals.
 The hard contact frequency measurement is displayed as a frequency measurement by generating a logic signal of level 0 when the contact is closed and level 1 when the contact is open.
 The display unit can be in Hz or in Beats Per Minute (BPM).

B.2.7 Pulse counting

- Display the **MEASUREMENT CONFIGURATION** dialog box:
- Select the **Counting** measurement function, then the "type of input" **Signal or Hard Contact** using the function and navigation keys.
- Enter the counting time using the alphanumeric keys.
- Confirm with ENTER.

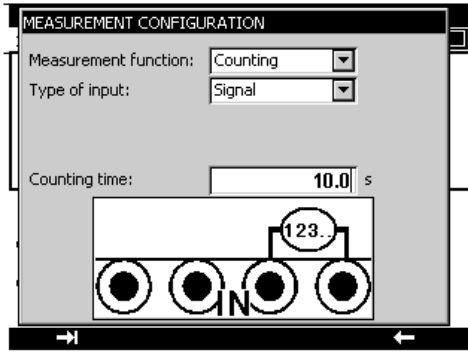


Connection is made between the Hz and COM terminals.
The input signals are converted into a logic signal as in the case of signal frequency or hard contact measurement.
If you enter a zero counting time, the counting lasts indefinitely.

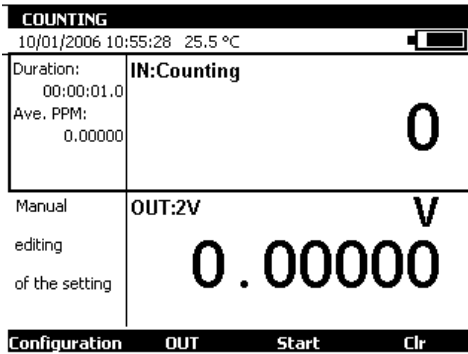

To initiate counting, confirm with the **Start** function key ("F3").
To stop counting without resetting the counter value, confirm with the **Stop** key.
To reset the counter to zero, press the **Clr** key (F4)
The counting period is displayed in the left part of the IN window. This period is reset whenever counting is stopped.

B.2.8 Resistive temperature probes (Temperature)

- Display the **MEASUREMENT CONFIGURATION** dialog box:
- Select the **Rt** measurement function, then the appropriate "type of probe" using the function and navigation keys.
- Select the display unit
- Confirm with ENTER.

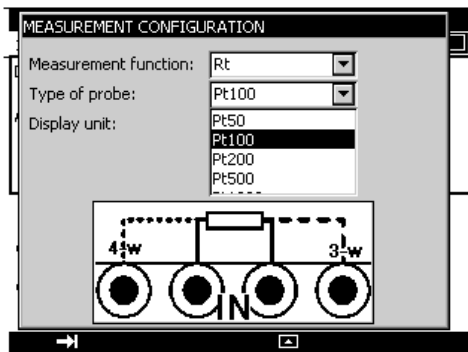




Connection is made according to the number of wires of the resistive probe.
The following probes are available:

Sensor
Pt 50 ($\alpha = 3851$)
Pt 100 ($\alpha = 3851$)
JPt 100 ($\alpha = 3916$)
Pt 100 ($\alpha = 3926$)
Pt 200 ($\alpha = 3851$)
Pt 500 ($\alpha = 3851$)
Pt 1 000 ($\alpha = 3851$)
Ni 100 ($\alpha = 618$)

Ni 120 ($\alpha = 672$)
Ni 1 000 ($\alpha = 618$)
Cu 10 ($\alpha = 427$)
Cu 50 ($\alpha = 428$)

α Being the temperature coefficient of the probe.


The C 50/75/100 displays an icon showing the connections used ( for 2 wires,  for 3 wires or  for 4 wires) to carry out the measurement. The wiring arrangement is automatically detected by the calibrator.

In order not to introduce an error when measuring with 3 wires, the following is recommended:

- Measure using conductors of the same length, the same diameter and the same type of metal (a difference of 40 m Ω between two wires introduces an error of about 0.1°C).
- Take care with the connections to avoid the appearance of interfering contact potential differences.

B.2.9 Measurement by Thermocouple (Temperature)

- Display the **MEASUREMENT CONFIGURATION** dialog box:
- Select the **Tc** measurement function, then the appropriate "type of thermocouple" using the function and navigation keys.
- Select the display unit
- Select the type of cold junction (CSF) used. Enter the temperature of the cold junction in the case of a programmed cold junction.
- Confirm with ENTER.

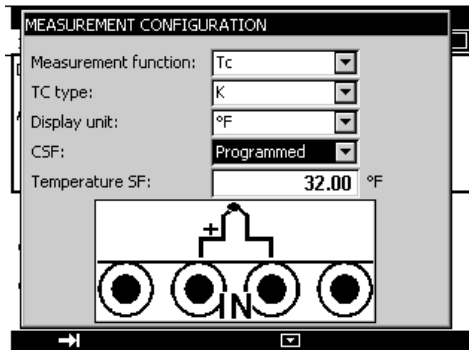


The thermocouples available are: K, T, J, E, N, U, L, S, R, B, C, PL, Mo, NiMo/NiCo.

After a significant thermal shock, it is recommended that the unit is allowed to stabilize in order to use the internal cold junction (CSF) with maximum accuracy.


B.2.10 Pressure measurement

CAUTION: Function only available for models C 75 and C 100.

- open the **MEASUREMENT CONFIGURATION** dialog box,

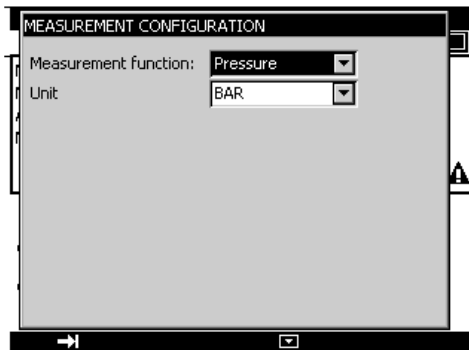

- select the **Pressure** measurement function.
- select the unit (BAR, PSI, Pa, Atm, Kgcm2, cmHg, mmHg, inHgftH2O, inH2O).
- press ENTER.

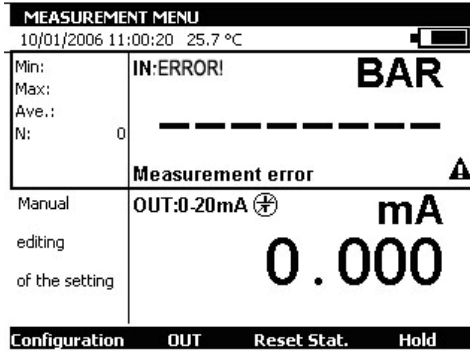

Connect the pressure sensor on the right-hand side of the unit (see chapter, side connectors). If this is not connected or is defective, an error message will be displayed.


B.2.11 Pressure measurement and detection of contact opening

The C 50/75/100 can detect the opening or closing of a contact (switch) and acquire the value of pressure at the moment that this change of state occurs.


In this case, the pressure measurement function is configured from the transmission part. The transmission/simulation functions are selected by pressing the function button, **F2** (OUT). Pressing this button activates the transmission/simulation window (see next chapter for more information on the transmission/simulation part).

- open the **MEASUREMENT CONFIGURATION** dialog box,
- select the **Pressure** measurement function.
- press ENTER.


To access the **Switch Test** mode, press the function button, **F4**, to select the **Mode** menu and then press ENTER.

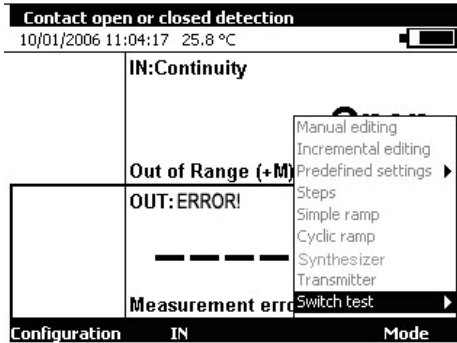

- Select the type of detection (**Open**, **Close** or **Open and Close**) and press ENTER.

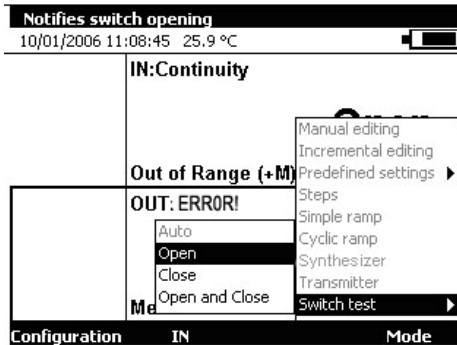


Once the type of detection is selected, every change of the selected type is detected and the measured value of pressure at the time of change is displayed.

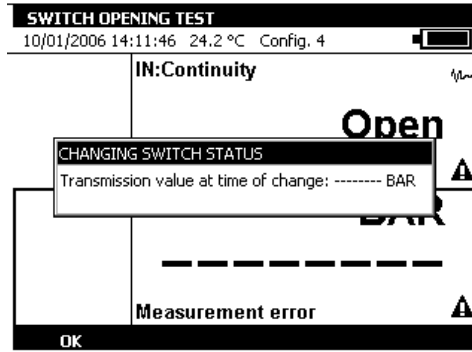


- To accept (acknowledge) the measurement, press the function button, **F1 (OK)**.
- To exit the **Switch Test** mode, press **ESC**.

B.3 Generation/Simulation

The transmission/simulation functions are selected by pressing the function button, **F2 (OUT)**. Pressing this button activates the transmission/simulation window: the lower window in the display is then marked by a rectangular border.

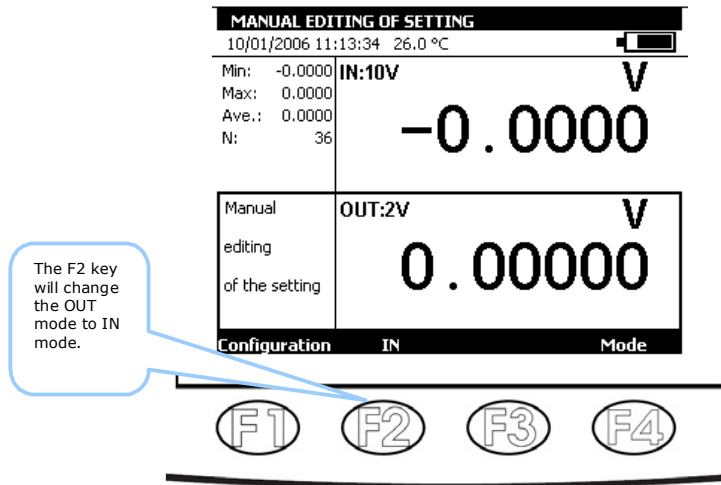


To select a Simulation function, press the **F1 (configuration)** key. Select the **Function ...** menu using the navigation keys and confirm with the ENTER key. A **TRANSMISSION CONFIGURATION** dialog box is displayed. The connections in the Transmission mode are made to the four "OUT" terminals located on the right half of the unit:

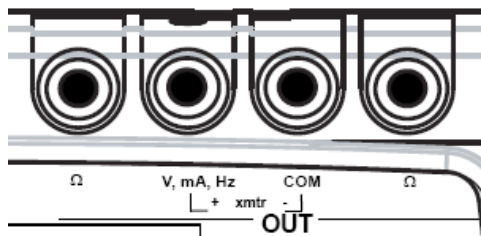

B.3.1 Generating a DC voltage

- Display the **TRANSMISSION CONFIGURATION** dialog box:
- Select the **Vdc** transmission function, then the range suitable for measurement using the function and navigation keys.
- Confirm with ENTER.

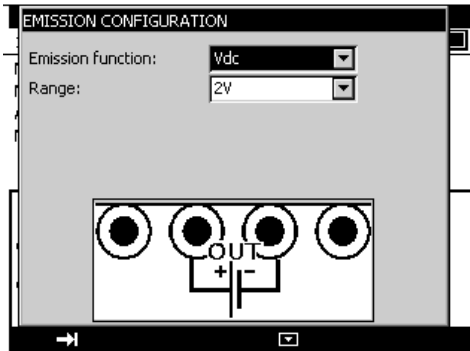

The following ranges are available:

Range	100 mV	2 V	20 V	50 V (1)
Resolution	1 μ V	10 μ V	100 μ V	1 mV
Output impedance	< 1 Ω	<1 Ω	<1 Ω	<1 Ω
Output load	1 K Ω	2 K Ω	4 K Ω	4 K Ω

(1) The 50V function is only available for models C 75 and C 100.

The DC source voltage to be generated is connected between terminals V and COM.

B.3.2 Current generation


- Display the **TRANSMISSION CONFIGURATION** dialog box:
- Select the **Idc** measurement function, then the range using the function and navigation keys.
- Confirm with ENTER.

Depending on the range selected, several transmission modes are available:


Range	24 mA	4-20 mA	0-20 mA
Resolution	1 μ A	1 μ A	1 μ A
Loop power supply	No	Possible	Possible
Set to scale	No	Linear or square law	Linear or square law

Connection is made between the mA and COM terminals.

If the loop power supply is on, the C 50/75/100 simulates a passive transmitter supplied with 24 V internally.

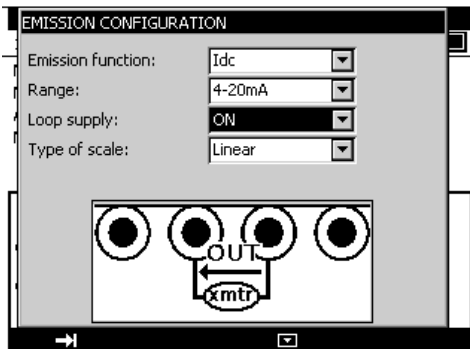




If the loop power supply is off, the C 50/75/100 simulates a passive transmitter supplied with 24 V externally.

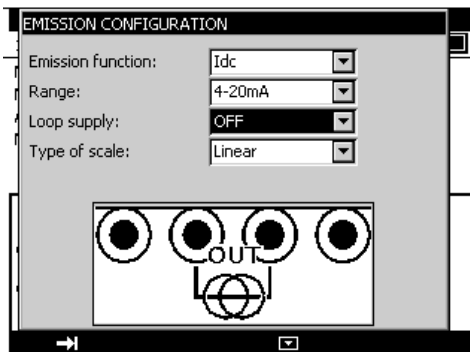

When the square law scale is selected, it must be activated by using the **Configuration** → **Set to scale** menus. Once "set to scale" is activated, the user enters the values to be simulated in a unit of the new scale.


The C/50/75/100 indicates the configuration selected in the window, using the following icons:

-  : to show Loop power is off
-  : to show Loop power is on
-  : to indicate a square law scale

Refer to paragraph B.2.2 (Measuring) for an explanation of the square law scale.

B.3.3 Resistance simulation

- Display the **TRANSMISSION CONFIGURATION** dialog box:
- Select the **Ohm** measurement function, and measurement current, then the range using the function and navigation keys.
- Select the measurement current
- Confirm with ENTER.

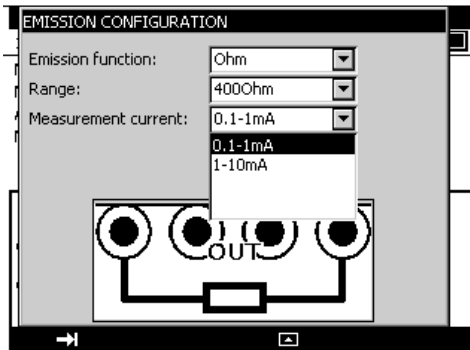

The following ranges are available:


Range	40 Ohm	400 Ohm	4000 Ohm
Resolution	1 mOhm	1 mOhm	10 mOhm
Measurement current	1-10 mA	0.1-1 mA or 1-10 mA	0.1-1 mA
Settling time	< 1 ms	< 1 ms	< 1 ms

If the measurement current is very high, the message "Out of Range" is displayed in the transmission window. The resistance simulation function can be used with either 2, 3 or 4 wire connection.

If a polling acquisition system is used, ensure that the current is maintained for more than 1 ms to avoid measurement errors due to the response time of the resistance simulation function.

B.3.4 Resistive probe simulation (temperature)

- Display the **TRANSMISSION CONFIGURATION** dialog box:
- Select the **Rt** transmission function, then the appropriate "type of probe", and range using the function and navigation keys.
- Select the measurement current
- Select the display unit
- Confirm with ENTER.

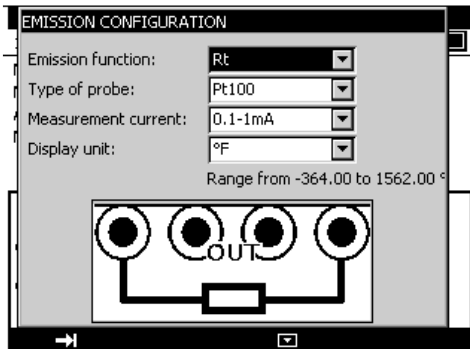

Connection is made between the two Ω terminals. The following probes are available:

Sensor
Pt 50 ($\alpha = 3851$)
Pt 100 ($\alpha = 3851$)
JPt 100 ($\alpha = 3916$)
Pt 100 ($\alpha = 3926$)
Pt 200 ($\alpha = 3851$)


Pt 500 ($\alpha = 3851$)
Pt 1 000 ($\alpha = 3851$)
Ni 100 ($\alpha = 618$)
Ni 120 ($\alpha = 672$)
Ni 1 000 ($\alpha = 618$)
Cu 10 ($\alpha = 427$)
Cu 50 ($\alpha = 428$)

The resistive temperature probe simulation function can be used with either 2, 3 or 4 wire connection.

As for the resistance simulation function, if a polling acquisition system is used, ensure that the transmitter carries out the measurement at least 1 ms after the current is present.

B.3.5 Thermocouple simulation (temperature)

- Display the **TRANSMISSION CONFIGURATION** dialog box:
- Select the **Tc** transmission function, then the appropriate "type of thermocouple", using the function and navigation keys.
- Select the display unit
- Select the type of cold junction compensation (CSF) used. Enter the temperature of the CSF in the case of a programmed CSF.
- Confirm with ENTER.

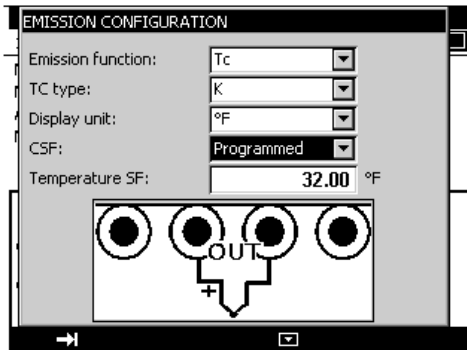


The thermocouples available are: K, T, J, E, N, U, L, S, R, B, C, PL, Mo, NiMo/NiCo.

After a significant thermal shock, it is recommended that the unit is left for the temperature to stabilize in order to use the internal cold junction (CSF) with maximum accuracy.

B.3.6 Frequency generation

- Display the **TRANSMISSION CONFIGURATION** dialog box:
- Select the **Frequency** transmission function, then the range using the function and navigation keys.
- Select the **Signal** "Output type".
- Enter the amplitude of the signal between 0 and 20 V.
- Confirm with ENTER.

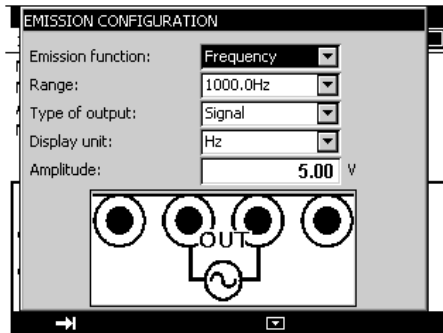

The following ranges are available:

Range	1,000 Hz	10,000 Hz
Resolution	0.01 Hz (1)	0.1 Hz (1)
Max. Amplitude	20 V	20 V


(1) Note that the captured value may differ from the displayed value. The frequency generated is derived from a fixed frequency by dividing it by a whole number. The displayed value (within the resolution of the display) is, therefore, this value recalculated with the fastest approximation to the captured value.

The display units may be in Hz or Beats per minute (BPM).
 Connection of the frequency source generated is between the Hz and COM terminals.

B.3.7 Frequency generation for hard contact

- Display the **TRANSMISSION CONFIGURATION** dialog box:
- Select the **Frequency** transmission function, then the range using the function and navigation keys.
- Select the "Type of Output" **Hard contact**.

- Confirm with ENTER.

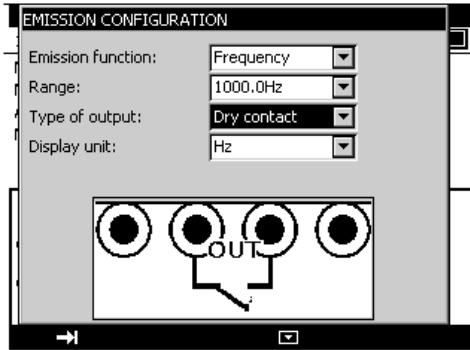

The following ranges are available:


Range	1,000 Hz	10,000 Hz
Resolution	0.01 Hz (1)	0.1 Hz (1)
Max. Amplitude	20 V	20 V


(1) Note that the captured value may differ from the displayed value. The frequency generated is derived from a fixed frequency by dividing it by a whole number. The displayed value (within the resolution of the display) is, therefore, this value recalculated with the fastest approximation to the captured value.


The display units may be in Hz or Beats per minute (BPM).
 Connection of the frequency source generated is between the Hz and COM terminals.

B.3.8 Pulse generation

- Display the **TRANSMISSION CONFIGURATION** dialog box:
- Select the **Pulse** transmission function, then the range using the function and navigation keys.
- Select the "Type of Output" **Signal**.
- Enter the amplitude of the signal between 0 and 20 V.
- Confirm with ENTER.

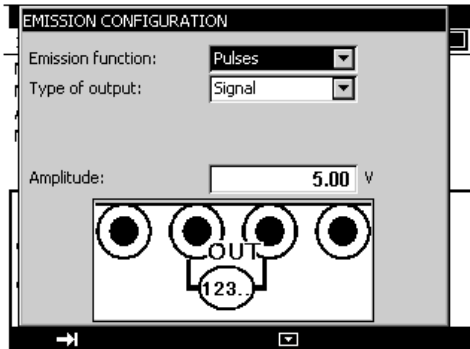


The  icon appears in the Transmission window.
 To change the default parameters, press ENTER or enter the **Configuration ...** menu then **Pulses**

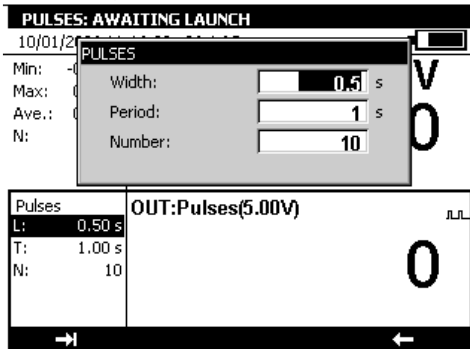



- The parameters are:
- Width: the duration of the HIGH logic state in seconds
 - Period: the duration of the HIGH logic state and the LOW logic state in seconds
 - Number: the number of pulses to be generated, between 1 and 999,999.

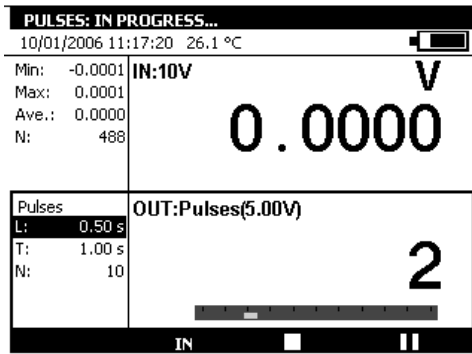
To commence pulse generation, press **Start**.




During pulse generation, a progress bar indicates the state of progress. The function keys can be used to control generation:

The  key stops generation at any time

The  key suspends generation


The  key commences or resumes generation

The  icon in the transmission window indicates suspended generation.

C. ADVANCED OPERATION

C.1 Simulation Modes


Several transmission modes are available in the C 50/75/100 to facilitate rapid checking and calibration of instruments and transmitters. To change the transmission mode, open the transmission window using the **OUT** function key (F2).

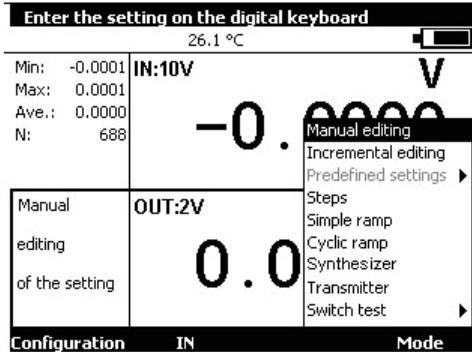


When the transmission window is open, the C 50/75/100 is set by default to the **Manual edit** mode. To access the other modes, select the **Mode** menu using Function key F4. Select a transmission mode using the Up/Down keys of the navigator and confirm with ENTER. To exit a transmission mode and return to the default mode, press the ESC key.


C.1.1 Manual Edit Mode

In this mode, the value to be transmitted may be entered directly using the alphanumeric keys. The value entered appears at the bottom of the transmission window during entry. To cancel the entry, press the ESC key. To transmit the value entered, confirm with the ENTER key.

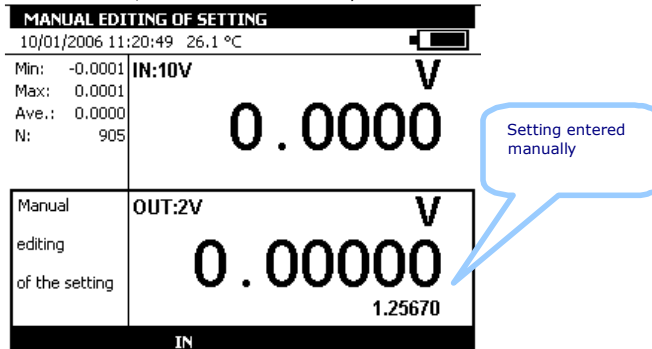

C.1.2 Incremental Edit Mode


When this mode is active, the  icon appears in the transmission window. Use the 4 navigator keys to edit the value to be transmitted. To select a digit, use the Left \leftarrow and Right \rightarrow keys of the navigator. The editable digit appears reversed in the display (white on black). To increment/decrement the digit selected, use the Up \triangle or Down ∇ key of the navigator.

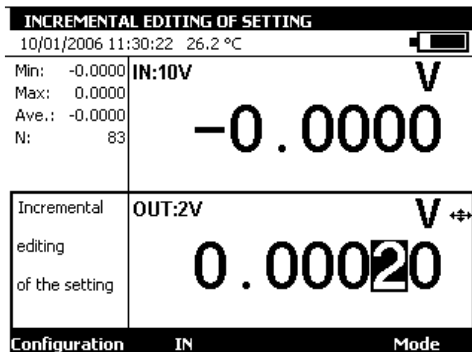


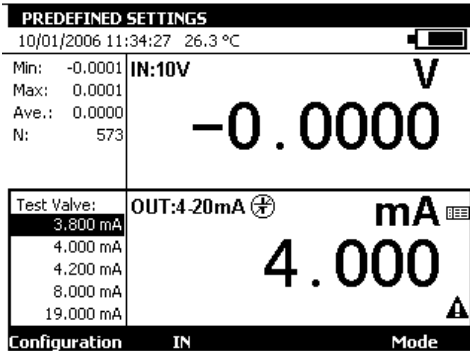
The value displayed is immediately active and it is not necessary to confirm it.

C.1.3 Predefined Settings Mode


This mode is available for the DC current transmission function for the 0-20 mA and 4-20 mA ranges only. Two types of predefined settings are offered: Valve Test and Percentage of full scale (% of FS).

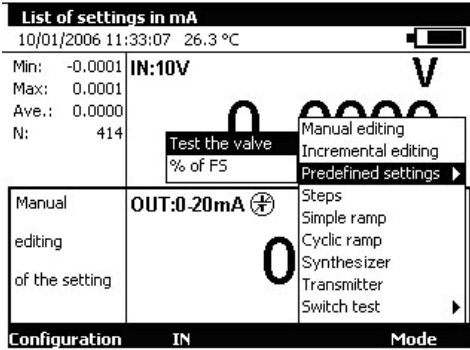



In the case of valve test, the predefined values are displayed in the left hand side of the transmission window. The  icon is displayed in the right hand side of the window.




The Up/Down keys of the navigator can be used to select the setting from the list. The ENTER key transmits the selected setting. The Left/Right keys of the navigator are used to transmit the previous/next setting. The numerical keys 0 - 9 are used to enter the value to be transmitted on the keyboard.

In the case of values predefined as a percentage of full scale, the  icon appears on the left hand side of the transmission window.

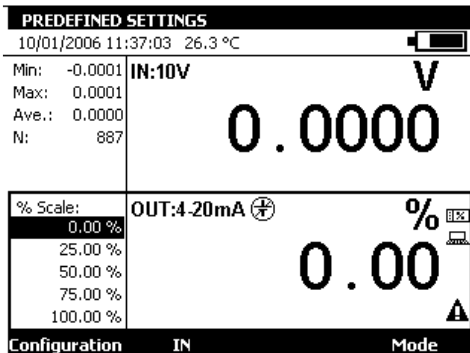


The  icon indicates setting to scale. To display the scale applied, use the Configuration menu, then the "set to scale" menu.

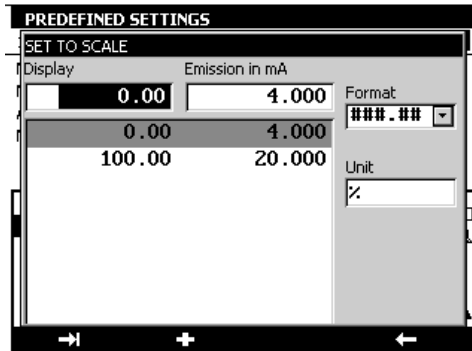


C.1.4 Staircase mode




This mode is used to program an incremental progression of the active transmission function.

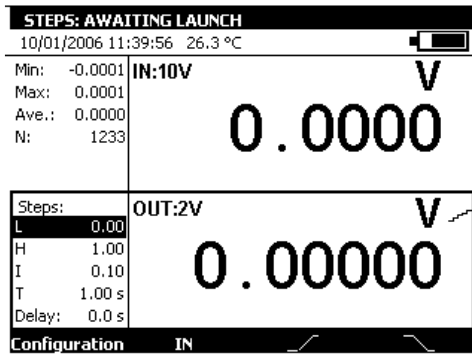
When this mode is active, the  icon appears in the transmission window.




The  function key launches a cycle of increasing increments and the  function key launches a cycle of decreasing increments. The default parameters of this mode are displayed on the left hand side of the transmission window. To change these parameters, press ENTER or use the **Configuration**  **Mode...** menus.

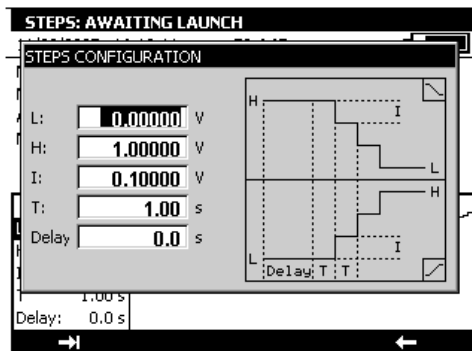

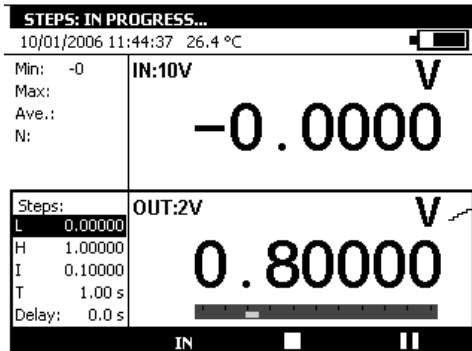

The parameters of a staircase are:
 L: minimum amplitude of the signal.
 H: maximum amplitude of the signal.
 I: amplitude of the increment
 T: duration of the steps in seconds
 Delay: delay in seconds between launching the staircase and transmission of the first increment.




During generation of a staircase, a progress bar indicates the state of progress. The function keys control generation:

The  key stops generation at any time


The  key suspends generation


The  key commences or resumes generation



An  icon in the transmission window indicates suspended generation.


C.1.5 Simple Ramp Mode


The simple ramp generation function is used to program a linear variation in one direction (increasing or decreasing) of the active transmission function.

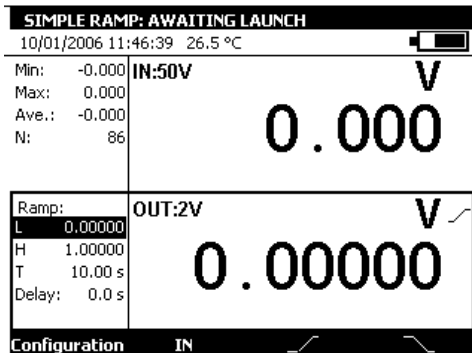When this mode is active, the  icon appears on the transmission window.



The  key is used to launch an increasing ramp and the  function key is used to launch a decreasing ramp.

The default parameters of this mode are displayed in the left hand side of the transmission window. To change these parameters, press ENTER or use the **Configuration**  **Mode...** menus.

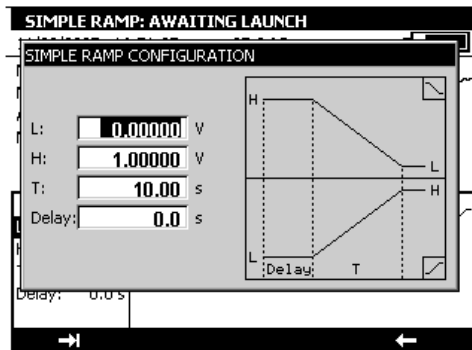

The parameters of a simple ramp are:


L: minimum amplitude of the signal.


H: maximum amplitude of the signal.


T: duration of the ramp in seconds.


Delay: delay in seconds between launching the ramp and the start of transmission.

During generation of a simple ramp, a progress bar indicates the state of progress. The function keys are used to control generation:

The  key stops generation at any time


The  key suspends generation


The  key commences or resumes generation




An  icon in the transmission window indicates suspended generation.


C.1.6 Cyclic Ramp Mode

The cyclic ramp generation function is used to program a first linear variation in a direction (increasing or decreasing) followed by a first step and then a second linear variation in a direction opposite to the first variation followed by a second step.

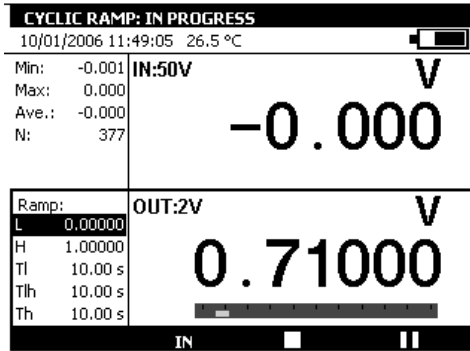When this mode is active, the  icon appears in the transmission window.



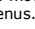

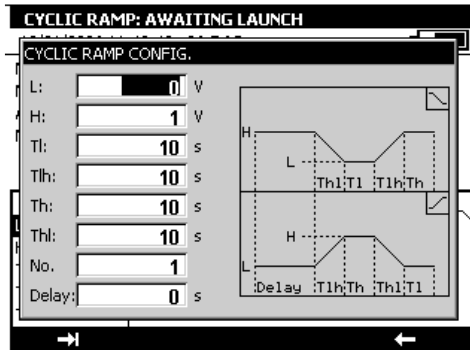The  function key is used to launch an increasing cyclic ramp and the  function key is used to launch an decreasing cyclic ramp. The default parameters of this mode are displayed in the left hand side of the transmission window. To change these parameters, press ENTER or use the **Configuration**  **Mode...** menus.




The parameters of a cyclic ramp are:
 L: minimum amplitude of the signal.
 H: maximum amplitude of the signal.
 Tlh: duration of a decreasing ramp.
 Tbh: duration of an increasing ramp.
 Th: duration of the high step.
 Tl: duration of the low step.
 Nbr: number of cycles to be generated.
 Delay: delay in seconds between launch of the cyclic ramp and the start of transmission.

During generation of a cyclic ramp, a progress bar indicates the state of progress. The function keys are used to control generation:

The  key stops generation at any time

The  key suspends generation


The  key commences or resumes generation


An  icon in the transmission window indicates suspended generation.



C.1.7 Synthesizer Mode

The Synthesizer function is used:

- to store up to 100 transmission values in permanent memory,
- to recall and transmit the contents of these memories manually or automatically.

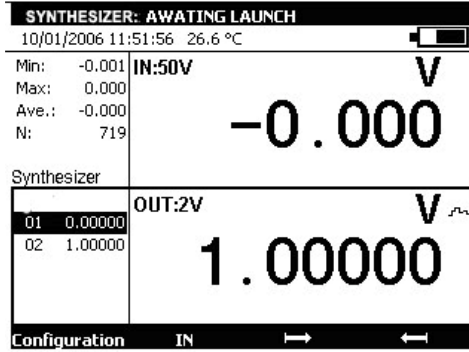When this mode is active the  icon appears in the transmission window.




The  key is used to launch generation of values in increasing order and the  function key is used to launch generation of values in decreasing order. The default parameters of this mode are displayed in the left hand side of the transmission window.


The parameters of the Synthesizer mode are:
 First point no.: number of the first point in a cycle
 Last point no.: number of the last point in a cycle
 T: the duration for which a point is transmitted.
 Nbr: the number of polling cycles
 Delay: delay between launch and transmission of the first point.




To change these parameters, use the **Configuration**  **Synthesizer...**  **Parameters...** Menus.

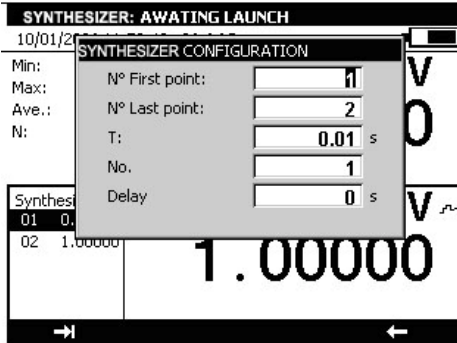

The number of the first point may be higher than that of the last point. All points between the first and last are generated.

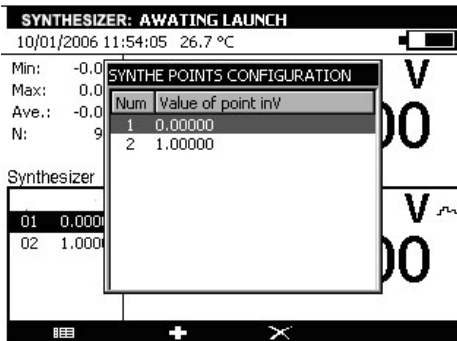


To edit the points to be synthesized, use the **Configuration**  **Synthesizer...**  **Points....** Menu.





Use the function keys:
 to cancel a point
 to add a point
 to edit a point

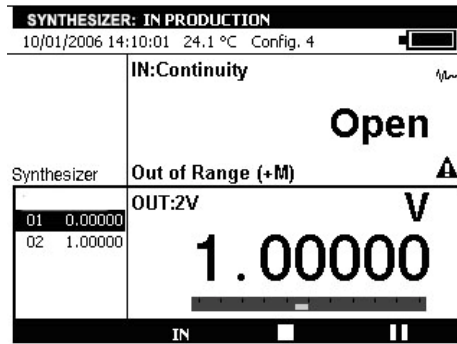
use the  and  keys to transmit points according to the parameters




During generation, a progress bar indicates the state of progress. The function keys are used to control generation:

The  key stops generation at any time

The  key suspends generation

The  key commences or resumes generation

An  icon in the transmission window indicates suspended generation.

It is possible to transmit points manually one by one using the navigation keys. Use the Up and Down keys to select a point. ENTER transmits the selected point and Left/Right select and transmit the previous/next point in the list immediately.

C.1.8 Transmitter Mode


This mode is used to transmit a value identical to the measured value.


C.2 Scaling

The scale correction function performs a conversion between the electrical quantities measured and the physical quantities converted.

This linearization is used partially to correct errors induced by non linear sensor/converter systems.

The Set to scale function is used to define up to 10 segments of a straight line, or 10 points, in order to approach a non linear response curve as closely as possible and to perform scale corrections for each segment.

The  symbol is displayed on the screen in the active window when Set to scale is active.

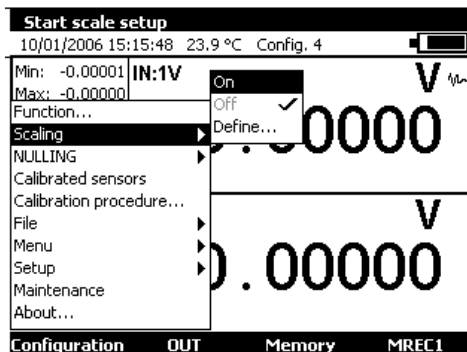

The **Define...** menu is used to program up to 10 lines of 2 values: X and Y= f(X).


In measurement: X = The value measured and Y = The value displayed.

In transmission: X = The Setting displayed and Y = The value transmitted.


The lines entered are sorted according to increasing X to set to scale a value X, the unit searches for the 2 lines n and m=n+1 that enclose it and extrapolates linearly:

$$Y = Y_n + (X - X_n) \times (Y_m - Y_n) / (X_m - X_n)$$


Use the function keys to edit the points:

To Add a line: enter X and Y, then press the  function key.

To select a line from the list, use the Up and Down navigation keys.

To cancel a selected line, use the  key.


The Format and Units zones are used to select the number of decimal places and the display units.

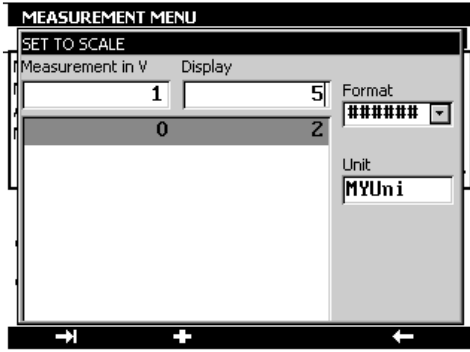

C.3 Differential Measurements


The relative measurement function of the unit is used:
 ⌘ to program a reference value other than that of the unit (ZERO function),
 ⌘ to cancel by measurement or programming a constant or interfering value (TARE function).

When one of the relative measurement functions is active, the Δ symbol is displayed on the screen in the measurement window.

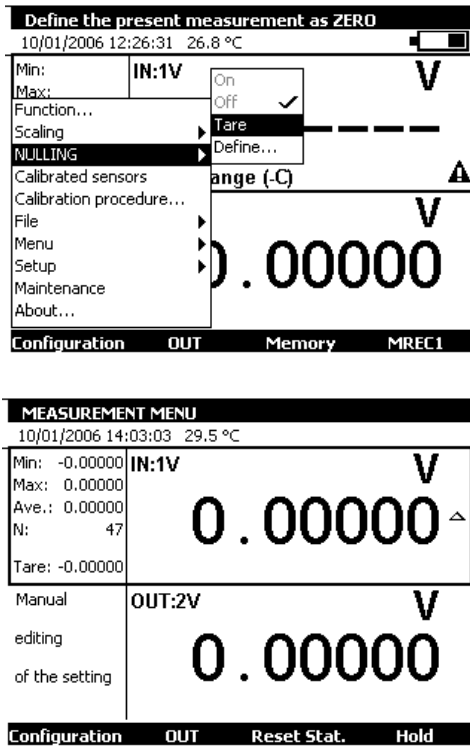

The ZERO Δ Define... menu is used to program the Tare value (positive or negative). This value is subtracted from the measurements:


$$\text{Value Displayed} = \text{Value measured} - \text{Tare Value}$$

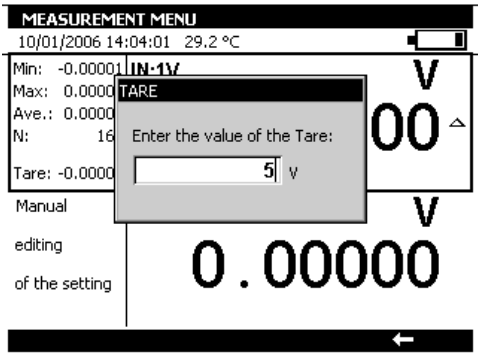


C.4 Calibrated sensors

The unit's calibrated sensors function makes it possible to use sensors of which the calibration (correction) factors can be taken into account by the unit at the time of measurement.

- Open the **MEASUREMENT CONFIGURATION** dialog box,
- select the **Calibrated Sensors** function.

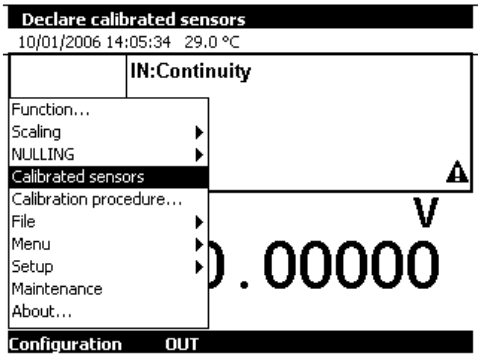

- press ENTER.

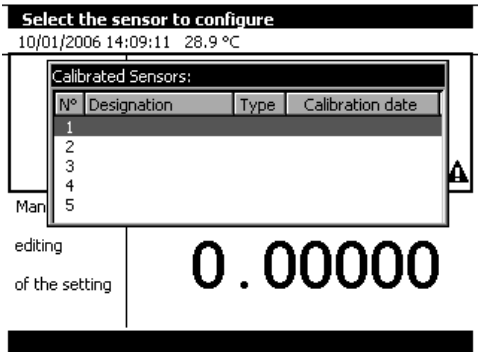

- Use the Up △ / Down ▽ arrow buttons to adjust the parameters or select a new line to define a new sensor.
- press ENTER.

Calibrated sensor no.1

Designation:

Calibration date:

Type:

Input:

Point	Real temperature	Measured °C

- Fill in the information fields for the sensor. To move from field to field, use the function button, **F1** (↔).

Select the sensor to configure

10/01/2006 14:20:04 28.9 °C

Calibrated Sensors:

N°	Designation	Type	Calibration date
1	CAPTURE1	Tc	09/01/2006
2			
3			
4			
5			

Man editing of the setting

0.00000

- To enter calibration points in the table, use the **+** button.

Calibrated sensor no.1

Designation:

Calibration date:

Type:

Input:

Point	Real temperature	Measured °C
1	0	0

- Enter the values and press ENTER.

Calibrated sensor no.1

Designation:


Calibration date:



Type:

Input:

Point	Real temperature	Measured °C
1	0	0.05

- Use the following buttons to continue configuring a sensor.

 to edit an existing calibration point,

-  to add a calibration point,
-  to delete a calibration point.

Between 1 and 4 calibration points can be entered per sensor.
 These calibration points are used to calculate a polynomial $c(T)$ of degree 0 to 3, giving the sensor's voltage (or resistance) correction at temperature T.

- . In the specific case where a single calibration point is given, the behavior will differ according to whether the sensor is a thermocouple or a thermometric resistance:
- . In the case of a thermocouple, the correction is a fixed voltage deviation.
- . In the case of a resistive probe, the correction made is an R0 correction.


Sensors declared in this manner are added to the list of couple types (or of probe types) proposed in the measurement function settings dialog box. They appear at the top of the list, in front of the standard sensors. Their name is preceded by the '*' character, indicating that these are calibrated sensors.

C.5 Calibration procedure


CAUTION: Function only available for models C 75 and C 100.


The C 75/100 is capable of creating a calibration report from a pre-defined procedure.
 The number of procedures that can be recorded depends on the size of the available memory and the size of each procedure (number of test points). If the memory is not being used by other functions, it is possible to record several tens of procedures.
 To find the available memory size, refer to the chapter, Storage of current acquisitions (chapter 6).


- Open the **MEASUREMENT CONFIGURATION** dialog box,
- select the **Calibration procedure** function,
- press ENTER.

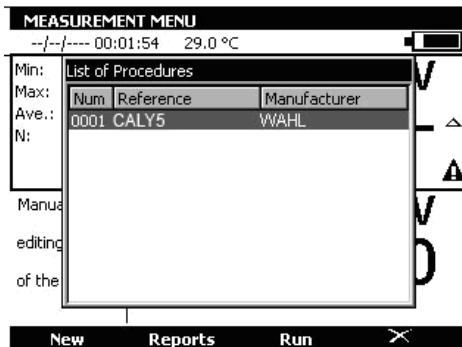

- Use the Up Δ / Down ∇ arrow buttons to adjust the parameters or press the function button **F1** (new) to define a new procedure, press ENTER.

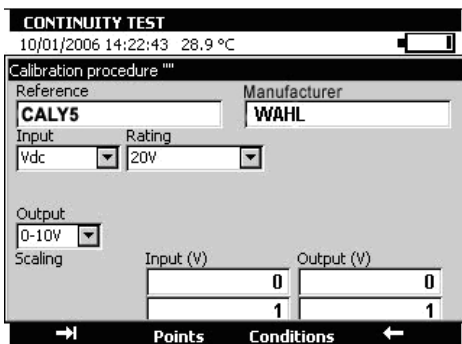

- Complete the information fields for the transmitter to be calibrated and define the input/output types and the full-scale, where appropriate. To move from field to field, use the function button, F1 ()
- Define the calibration points by pressing F2 (Points).

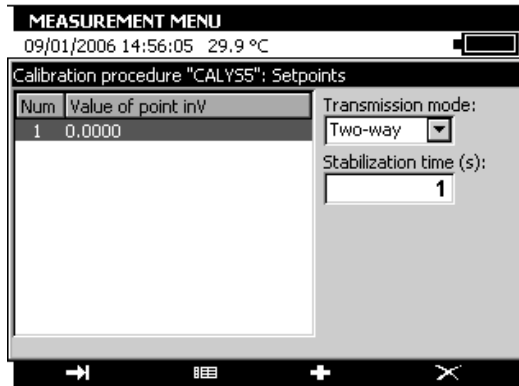

- Use the following buttons to define the points.



to edit an existing calibration point,




to add a calibration point,



to delete a calibration point.

- Use the F1 (→) button to select the transmission mode field, press the function button, F4 (⌵), to drop down the menu and use the Up Δ / Down ∇ arrow buttons to choose the transmission mode.

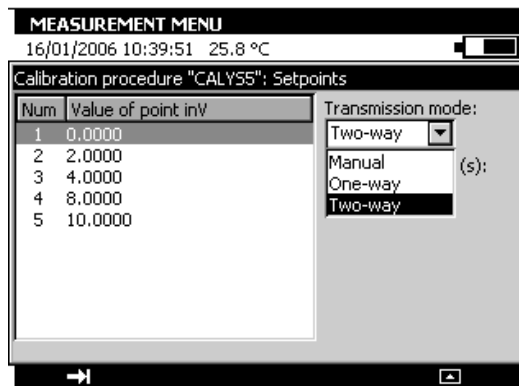

Definitions of transmission modes:


Manual: the settings are generated under manual control with the user accepting each point,

One-Way: the settings are generated automatically in the order in which the points (Point 1, Point 2, Point 3 etc.) are defined,


Two-Way: the settings are generated automatically in the order in which the points (Point 1, Point 2, Point 3 etc.) are defined and then in reverse order (Point n, Point (n-1) etc.).

The settling time field can be used to define the time, in seconds, between sending the setting from the output of the C 75/100 and making the measurement at its input.


- When all fields have been completed, press ENTER.

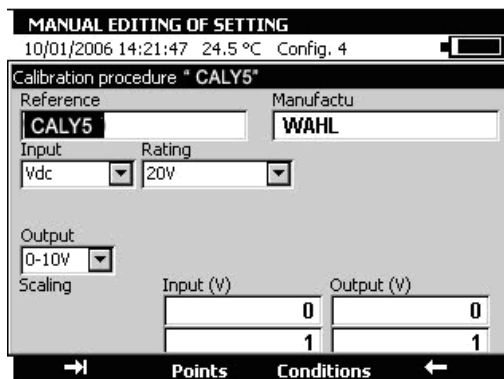

- Press **F3** (conditions) to define the test conditions (limits).

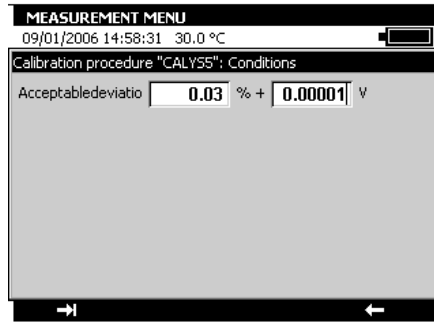

- When the limits have been defined, press ENTER.
- Press ENTER again.

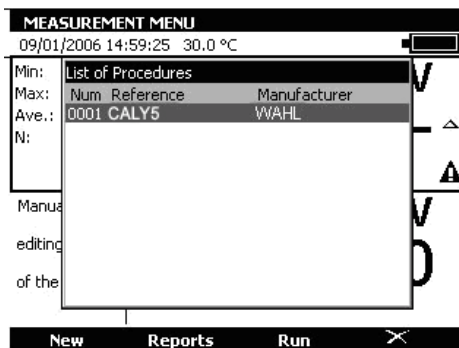


- To execute the procedure, press **F3** (Execute).




- After completing the fields, start execution by pressing **F3** (Execute).


Where the procedure is executed manually, the user will have to confirm the calibration points one by one.

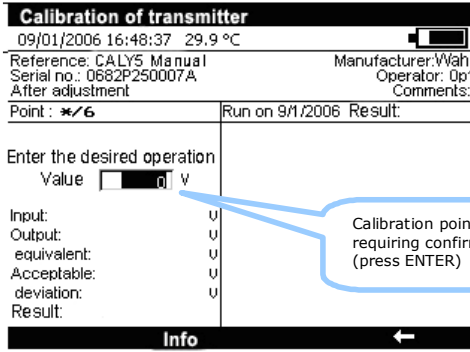

If the transmission mode has been defined as One-Way or Two-Way, the procedure is executed automatically.

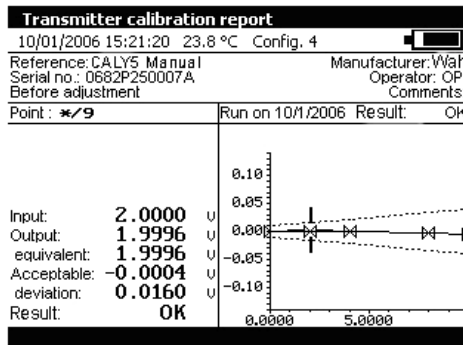

- Press the function button, **F1**, to store the calibration report.

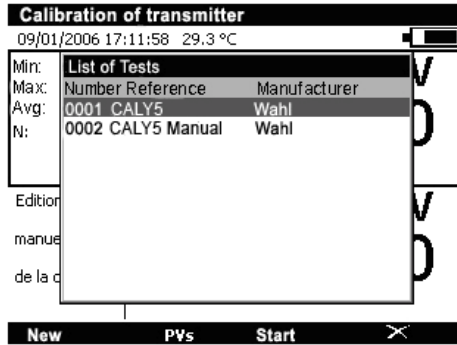


- To display the calibration reports, select the desired procedure and press the function button, **F2** (Reports).
- From the list, select the report to be viewed and press the function button, **F1** (View).

C.6 Storing the current acquisitions

CAUTION: Function only available for models C 75 and C 100.


- The C 75/100 is capable of storing 10,000 values in one or more acquisition bursts.
- If necessary, use the **F2** button to open the 'IN' window and display the **Measurement** menu bar.
 - Open the Configuration menu by pressing **F1**.
 - Select the **Menu** function then **Memory**.
 - Press **ENTER**.

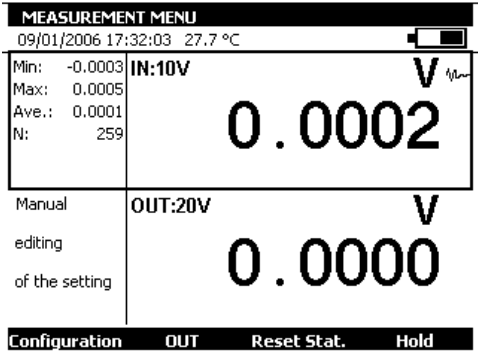

Two new functions, Memory and MREC1, then appear in the bottom bar (replacing the functions Reset stat. And Hold). The left < and right > arrow buttons can be used to switch from one mode to the other.

Pressing the function button, **F4** (MREC1), stores the current acquisition.


Pressing **F3** (Memory) gives access to all the memory functions.

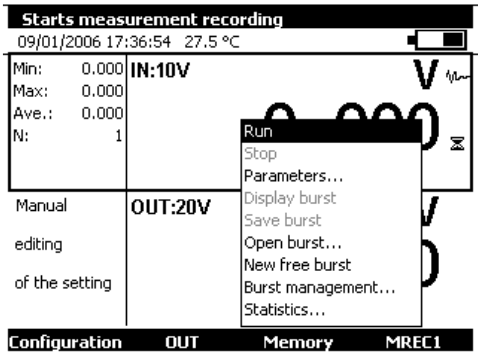


RUN: starts the storage of data as configured using the **Parameters** function. The icon is shown in the Measurements window.

STOP: stops the current storage operation.

PARAMETERS
 This can be used to define:
 the burst size (10,000 values max.),
 the sampling period, from 0.5 sec. to 30 min,
 and the type of trigger (none, low level, high level).

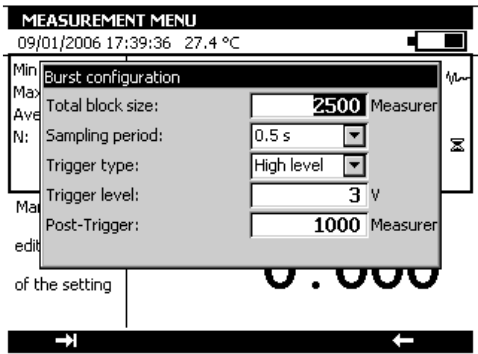

If high-level or low-level trigger is selected, the trigger level and number of data points to be stored after this trigger must be defined.

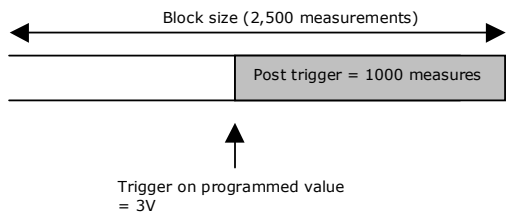

Burst display:

The burst can be displayed as a table of values or a trend curve.

Burst 'BURST1':
 11/01/2006 18:11:41 24.1 °C Config. 2


Start date: 11/01/2006 17:11:24

N°	Time	Value	Unit
1	00:00:00.0	9.5377	V
2	00:00:00.5	9.4959	V
3	00:00:01.0	9.4540	V
4	00:00:01.5	9.4123	V
5	00:00:02.0	9.3565	V
6	00:00:02.5	9.3293	V
7	00:00:03.0	9.2878	V
8	00:00:03.5	9.2463	V
9	00:00:04.0	9.2047	V
10	00:00:04.5	9.1631	V

1-> 2-> Graph STAT

At this level, markers can be set (F1 and F2 function keys) and all values falling between these 2 markers can be displayed in graphical form.


To display all the values in memory, press the function button, **F1** (Global).

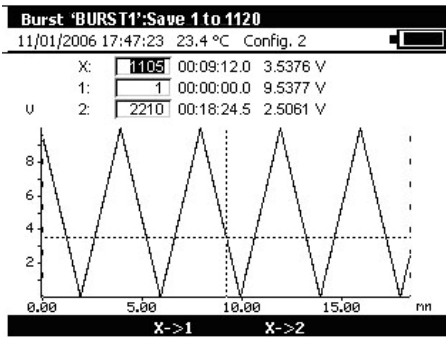

The left < and right > arrow buttons can be pressed to move the cursor and read off the abscissa and ordinate values.

At this level, the markers can be redefined in order to zoom in between these two new points:

- in the X field, enter a low value for the marker (X1), press ENTER and then press the function button, F2 (X¹),
- in the X field, enter a high value for the marker (X2), press ENTER and then press the function button, F3 (X²).

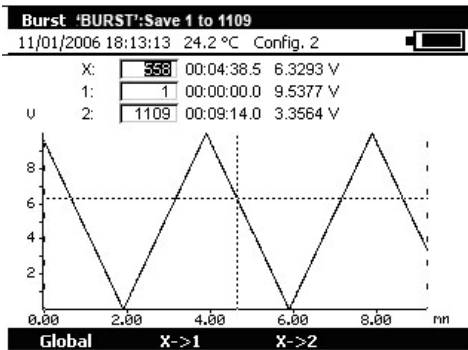


Burst save:

stores the current burst.

Burst open:

allows a burst to be selected for opening in order to view the data. At this level, a burst can be renamed or one or more bursts can be deleted.

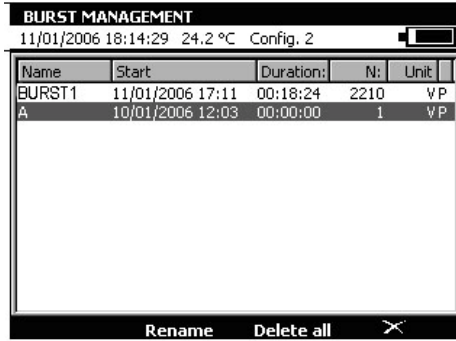

New burst:


starts a new burst. If a burst is running, the user will be asked if this should be saved.

Burst management:

can be used to view all bursts in memory. At this level, a burst can be renamed or one or more bursts can be deleted.

Statistics:

shows the number of bursts in memory, the number of free bytes and the number of measurements that can be saved.

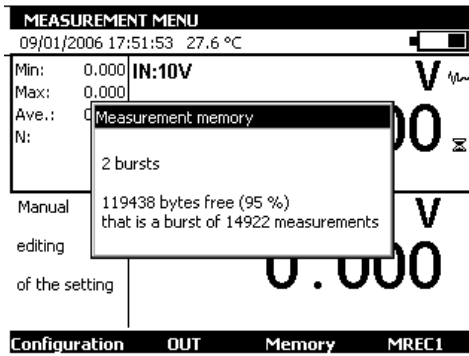


C.7 Configurations

A configuration is the state of the C 50/75/100 at a given moment. The state of the unit includes:


- The current functions and ranges for measurement and simulation,
- The parameters of all the transmission modes (staircase, ramp, Synthesizer, etc.),
- The scale corrections applied,
- All the preferences defined in paragraph C.8.3.

To save the state of the unit, use the **Configuration** → **File** → **Record under...** menus.

Use the navigation keys to select a configuration. Edit the name of the configuration to be saved with the alphanumeric keys and confirm with ENTER.

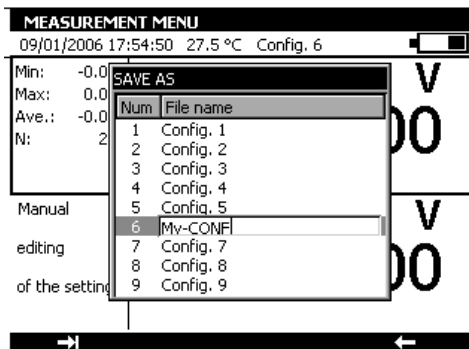


To recall a configuration from memory, use the **Configuration** → **File** → **Open...** menus.

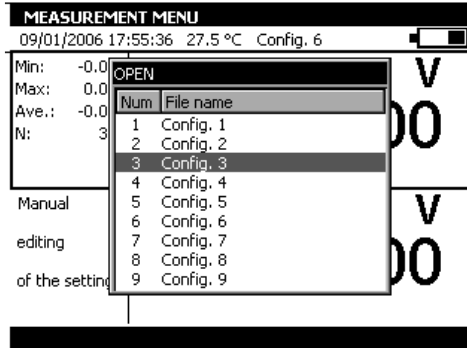


Use the navigation keys to select a configuration. Confirm with ENTER.
When loading a saved configuration, the C 50/75/100 enters the manual Edit mode in transmission.

To erase the configurations of the C 50/75/100, refer to paragraph A.5.2 to enter the Maintenance mode. Use the **Init EEP** function key to reset the configurations of the unit to zero.

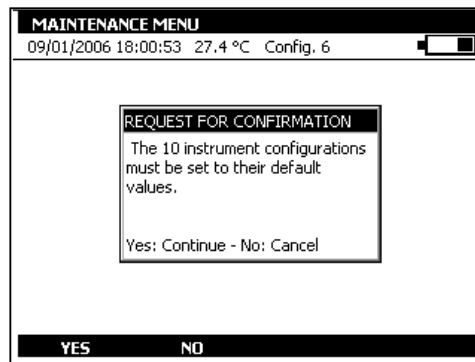


C.8 Setting parameters

The parameters of the C 50/75/100 can be set using the **Configuration** ⇄ **Setup** menus.
The **Contrast...** sub menu is used to adjust the contrast of the display.
The **Date/Time...** sub menu is used to set the date and time of the unit.
The **Preferences...** sub menu is used to set the generic parameters which apply to all the functions performed by the C 50/75/100.

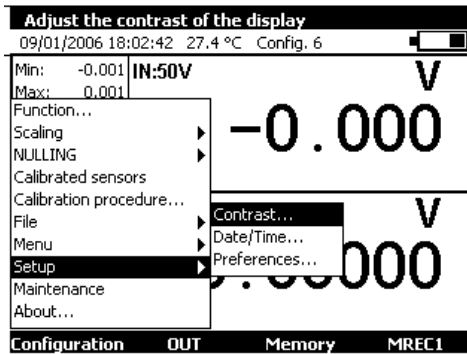


C.8.1 Adjustment of contrast

Use the Right and Left navigation keys to adjust the contrast of the display. The C 50/75/100 saves the setting made in its non volatile memory and uses it each time the unit is switched on.

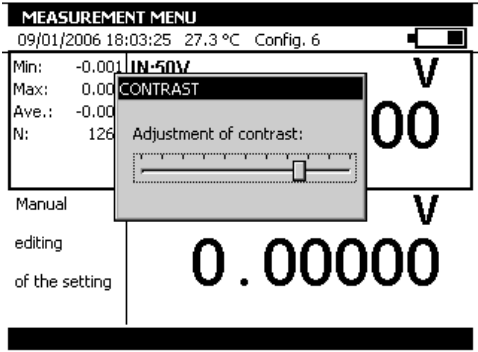


C.8.2 Date and Time

To set the date and time, use the **Configuration** ⇨ **Setup** ⇨ **Date/Time...** menus.

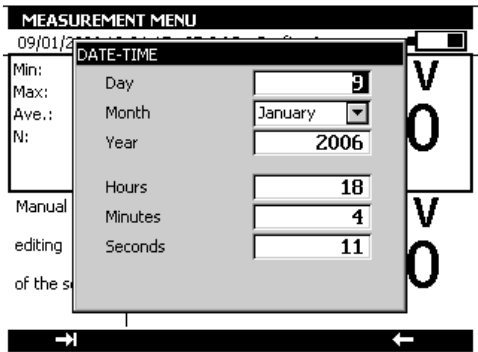

C.8.3 Preferences

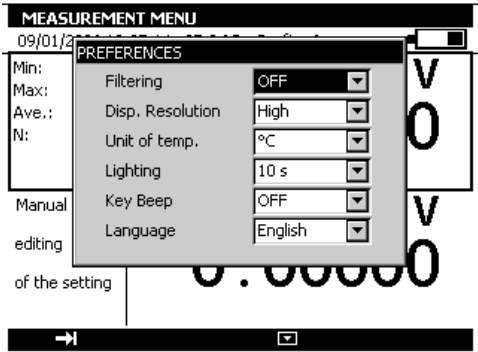

To display the Preferences dialog box, use the **Configuration** ⇨ **Setup** ⇨ **Preferences...** menus.

The adjustable parameters are:

Filtering: Used to average measurements before display. When filtering is switched off, the integration time for measurements is 0.5 seconds.

Resolution: Used to adjust the resolution of the measurements when displayed. There are three possible choices:

- HIGH: displays measurements with the highest possible resolution.
- AVERAGE: displays one digit fewer compared with the HIGH resolution mode.
- LOW: displays two digits fewer compared with the HIGH resolution mode.

Temperature units: used to select the temperature units, either °C, °F or K, for measurements and simulation.

Lighting: used to set the on time of the lighting before it is switched off to save the batteries.

Beep keys: used to switch on or off the transmission of an audible signal when pressing keys on the keyboard.

Language: used to select the language of the display in menus, dialog boxes and on-line help.

D. TECHNICAL SPECIFICATIONS

The accuracies quoted apply at + 18°C to + 28°C unless otherwise stated, and are expressed as $\pm (n \% R + C)$ where R = The reading and C = a Constant expressed in practical units. The specifications are given for a confidence level of 95%.

They apply to a product placed under reference conditions of measurement defined hereafter:

- **A warm-up period of twenty minutes is necessary.**
- **Use of the product without battery charger (wait thirty minutes after the end of the load).**
- **For weak signals (measurement and simulation: voltage cal 100mV and Ohm) use connections with bare wires or spade terminals.**

The accuracy includes the accuracy of the reference standards, non linearity, hysteresis, repeatability and long term stability over the period quoted.

D.1 Measurement Function

Measurement rate: 0.5 s per measurement.
Maximum rated voltage in common mode: 60 VDC or VAC.

D.1.1 DC Voltage (C 50/75)

Range	Resolution	Accuracy/1 year	Notes
±100 mV	1 μ V	0.013 % + 3 μ V	Rin > 10 M Ω
±1V	10 μ V	0.013 % + 20 μ V	Rin > 10 M Ω
±10V	100 μ V	0.015 % + 200 μ V	Rin = 1 M Ω
±50V	1 mV	0.015 % + 2 mV	Rin = 1 M Ω

Temperature coefficient < 7 ppm/°C from 0°C to 18°C and from 28°C to 50 °C.
Use the absolute value of the value measured (|R|) to calculate the accuracy.

D.1.2 DC Current (C 50/75)

Range	Resolution	Accuracy/1 year	Notes
±50 mA	1 μ A	0.0175 % + 2 μ A	Rin < 25 Ω
4-20 mA	1 μ A	0.0175 % + 2 μ A	Rin < 25 Ω
0-20 mA	1 μ A	0.0175 % + 2 μ A	Rin < 25 Ω

Temperature coefficient < 10 ppm/°C from 0°C to 18°C and from 28°C to 50 °C.

- Loop power supply = 24 V \pm 10%.
- HART compatibility: input impedance Rin = 280 Ω .
- Linear or square law display scale.

Use the absolute value of the value measured (|R|) to calculate the accuracy.

D.1.3 Resistance (C 50/75)

Range	Resolution	Accuracy/1 year	Notes
400 Ω	1 m Ω	0.012% + 10 m Ω	Measurement current = 0.25 mA
4000 Ω	10 m Ω	0.012% + 100 m Ω	Measurement current = 0.25 mA

Temperature coefficient < 5 ppm/°C from 0°C to 18°C and from 28°C to 50 °C.

- Automatic detection of connection scheme: 2 wire, 3 wire or 4 wire.
- For 2 wire connection, the measurement includes the resistance of the line.
- For 3 wire connection, add the out-of-balance of the line resistances.
- Open circuit terminal voltage < 10V.
- Continuity test:
 - Open circuit for R > 1000 Ω .
 - Closed circuit for R < 1000 Ω .

D.1.4 Temperature by thermocouples (C 50/75)

Sensor types:

- in accordance with CEI 584-1/1995 (couples K, T, J, E, S, B, N),
- in accordance with Din 43710 (couples U and L),
- in accordance with the HOSKINS tables (couple C),
- in accordance with the ENGELHARD table (platinum couple).

Sensor	Measuring range	Resolution	Drift / year
K	- 250 to -200°C	0.2°C	0.80°C
	-200 to -120°C	0.1°C	0.25°C
	-120 to 0°C	0.05°C	0.1°C
	+0 to +1,372°C	0.05°C	0.013 % + 0.08°C
T	- 250 to -200°C	0.2°C	0.70°C
	-200 to -120°C	0.05°C	0.25°C
	-120 to -50°C	0.05°C	0.10°C
	-50 to +400°C	0.05°C	0.013 % + 0.08°C
J	-210 to -120°C	0.05°C	0.25°C
	-120 to 0°C	0.05°C	0.09°C
	+0 to +1,200°C	0.05°C	0.013 % + 0.07°C
E	- 250 to -200°C	0.1°C	0.45°C
	-200 to -100°C	0.05°C	0.15°C
	-100 to 0°C	0.05°C	0.07°C
	+0 to +1,000°C	0.05°C	0.013 % + 0.05°C
R	-50 to +150°C	0.5°C	0.8°C
	+150 to +550°C	0.2°C	0.013 % + 0.35°C
	+550 to +1,768°C	0.1°C	0.013 % + 0.2°C
S	-50 to +150°C	0.5°C	0.80°C

S	+150 to +550°C +550 to +1,768°C	0.2°C 0.1°C	0.013 % +0.35°C 0.013 % +0.25°C
B	+400 to +900°C +900 to +1,820°C	0.2°C 0.1°C	0.013 % +0.4°C 0.013 % + 0.2°C
U	-200 to +660°C	0.05°C	0.15°C
L	-200 to +900°C	0.05°C	0.2°C
C	-20 to +900°C +900 to +2,310°C	0.1°C 0.1°C	0.25°C 0.013 % + 0.15°C
N	-240 to -190°C -190 to -110°C -110 to 0°C +0 to +1,300°C	0.2°C 0.1°C 0.05°C 0.05°C	0.5°C 0.15°C 0.08°C 0.013 % +0.06°C
Platinum	-100 to +1,400°C	0.05°C	0.3°C
Mo	0 to +1,375°C	0.05°C	0.013 % +0.06°C
NiMo/NiCo	-50 to +1,410°C	0.05°C	0.013 % +0.30°C

The precision is guaranteed for a reference junction temperature of 0 °C.

When using the internal reference junction (except couple B) add an additional uncertainty of 0.3 °C at 0 °C. For other temperatures, account must be taken of the sensitivity of the thermocouple to the temperature (T) in question, giving an additional uncertainty of 0.3 °C * S(0 °C)/S(T).

- Temperature coefficient: < 10 % of the accuracy/°C.
- Display in °C, °F and K.
- It is possible, to choose the location of the cold junction by programming from the keyboard (does not apply to thermocouple B):
 - external at 0°C,
 - internal (compensation for the temperature of the terminals of the unit).
 - by programming the temperature.

D.1.5 Temperature using resistive probes (C 50/75)

Sensor	Range of measurement	Resolution	Accuracy/1 year
Pt 50 ($\alpha = 3851$)	- 220°C + 1,200°C	0.01°C	0.012 % + 0.06°C
Pt 100 ($\alpha = 3851$)	- 220°C + 1,200°C	0.01°C	0.012 % + 0.05°C
JPt 100 ($\alpha = 3916$)	- 200°C + 510°C	0.01°C	0.012 % + 0.05°C
Pt 100 ($\alpha = 3926$)	- 210°C + 850°C	0.01°C	0.012 % + 0.05°C
Pt 200 ($\alpha = 3851$)	- 220°C + 600°C	0.01°C	0.012 % + 0.12°C
Pt 500 ($\alpha = 3851$)	- 220°C + 1,200°C	0.01°C	0.012 % + 0.07°C
Pt 1 000 ($\alpha = 3851$)	- 220°C + 1,200°C	0.01°C	0.012 % + 0.05°C
Ni 100 ($\alpha = 618$)	- 60°C + 180°C	0.01°C	0.012 % + 0.03°C
Ni 120 ($\alpha = 672$)	- 40°C + 205°C	0.01°C	0.012 % + 0.03°C
Ni 1 000 ($\alpha = 618$)	- 60°C + 180°C	0.01°C	0.012 % + 0.03°C
Cu 10 ($\alpha = 427$)	- 70°C + 150°C	0.01°C	0.012 % + 0.18°C
Cu 50 ($\alpha = 428$)	- 50°C + 150°C	0.01°C	0.012 % + 0.06°C

For negative temperatures, use the displayed value R and not its absolute value.

Temperature coefficient: < 10 % of the accuracy/°C.

The above accuracy is given for 4 wire connection of the temperature sensor.

Taking into account, also, the intrinsic error of the temperature sensor used and its conditions of use.

Measurement current: 0.25 mA

D.1.6 Frequency and counting (C 50/75/100)

Range	Resolution	Accuracy/1 year	Notes
20 kHz	< 0.01 Hz	0.005%	

- Temperature coefficient < 5 ppm/°C from 0°C to 18°C and from 28°C to 50°C.
- Triggering level 1V
- Scale in beats/min and Hz
- Measurement for frequency output and dry contact
- In the case of counting, this measurement may be made for a defined time or an infinite time.

D.1.7 DC Voltage (C 100)

Range	Resolution	Accuracy/1 year	Notes
±100mV	1 μ V	0.010% + 3 μ V	Rin > 10 M Ω
±1V	10 μ V	0.010% + 20 μ V	Rin > 10 M Ω
±10V	100 μ V	0.012% + 200 μ V	Rin = 1M Ω
±50V	1 mV	0.012% + 2 mV	Rin = 1M Ω

Temperature coefficient < 7 ppm/°C from 0°C to 18°C and from 28°C to 50 °C.

Use the absolute value of the value measured (|R|) to calculate the accuracy.

D.1.8 DC Current (C 100)

Range	Resolution	Accuracy/1 year	Notes
±50 mA	1 μ A	0.012% + 2 μ A	Rin < 25 Ω
4-20 mA	1 μ A	0.012% + 2 μ A	Rin < 25 Ω
0-20 mA	1 μ A	0.012% + 2 μ A	Rin < 25 Ω

Temperature coefficient < 10 ppm/°C from 0°C to 18°C and from 28°C to 50 °C.

- Loop power supply = 24 V \pm 10%.
- HART compatibility: input impedance Rin = 280 Ω .
- Linear or square law display scale.

Use the absolute value of the value measured (|R|) to calculate the accuracy.

D.1.9 Resistance (C 100)

Range	Resolution	Accuracy/1 year	Notes
400 Ω	1 mΩ	0.010% + 10 mΩ	Measurement current = 0.25 mA
4000 Ω	10 mΩ	0.010% + 100 mΩ	Measurement current = 0.25 mA

Temperature coefficient < 7 ppm/°C from 0°C to 18°C and from 28°C to 50 °C.

- Automatic detection of connection scheme: 2 wire, 3 wire or 4 wire.
- For 2 wire connection, the measurement includes the resistance of the line.
- For 3 wire connection, add the out-of-balance of the line resistances.
- Open circuit terminal voltage < 10V.
- Continuity test:
 - Open circuit for R > 1000 Ω.
 - Closed circuit for R < 1000 Ω.

D.1.10 Temperature by thermocouples (C 100)

Sensor types:

- in accordance with CEI 584-1/1995 (couples K, T, J, E, S, B, N),
- in accordance with Din 43710 (couples U and L),
- in accordance with the HOSKINS tables (couple C),
- in accordance with the ENGELHARD table (platinum couple).

Sensor	Measuring range	Resolution	Drift / year
K	- 250 to -200°C	0.2°C	0.70°C
	-200 to -120°C	0.1°C	0.20°C
	-120 to 0°C	0.05°C	0.1°C
	+0 to +1,372°C	0.05°C	0.010 % + 0.08°C
T	- 250 to -200°C	0.2°C	0.60°C
	-200 to -120°C	0.05°C	0.20°C
	-120 to -50°C	0.05°C	0.10 °C
	-50 to +400°C	0.05°C	0.010 % + 0.08°C
J	-210 to -120°C	0.05°C	0.20°C
	-120 to 0°C	0.05°C	0.09°C
	+0 to +1,200°C	0.05°C	0.010 % + 0.07°C
E	- 250 to -200°C	0.1°C	0.40°C
	-200 to -100°C	0.05°C	0.13°C
	-100 to 0°C	0.05°C	0.07°C
	+0 to +1,000°C	0.05°C	0.010 % + 0.05°C
R	-50 to +150°C	0.5°C	0.7°C
	+150 to +550°C	0.2°C	0.010 % + 0.30°C
	+550 to +1,768°C	0.1°C	0.010 % + 0.2°C
S	-50 to +150°C	0.5°C	0.70°C
	+150 to +550°C	0.2°C	0.010 % + 0.35°C
	+550 to +1,768°C	0.1°C	0.010 % + 0.25°C
B	+400 to +900°C	0.2°C	0.010 % + 0.4°C
	+900 to +1,820°C	0.1°C	0.010 % + 0.2°C
U	-200 to +660°C	0.05°C	0.15°C
L	-200 to +900°C	0.05°C	0.2°C
C	-20 to +900°C	0.1°C	0.20°C
	+900 to +2,310°C	0.1°C	0.010 % + 0.15°C
N	-240 to -190°C	0.2°C	0.4°C
	-190 to -110°C	0.1°C	0.10°C
	-110 to 0°C	0.05°C	0.08°C
	+0 to +1,300°C	0.05°C	0.010 % + 0.06°C
Platinum	-100 to +1,400°C	0.05°C	0.25°C
Mo	0 to +1,375°C	0.05°C	0.010 % + 0.06°C
NiMo/NiCo	-50 to +1,410°C	0.05°C	0.010 % + 0.30°C

The precision is guaranteed for a reference junction temperature of 0 °C.

When using the internal reference junction (except couple B) add an additional uncertainty of 0.2 °C at 0 °C. For other temperatures, account must be taken of the sensitivity of the thermocouple to the temperature (T) in question, giving an additional uncertainty of 0.2 °C * S(0 °C)/S(T).

- Temperature coefficient: < 10 % of the accuracy/°C.
- Display in °C, °F and K.
- It is possible, to choose the location of the cold junction by programming from the keyboard (does not apply to thermocouple B):
 - external at 0°C,
 - internal (compensation for the temperature of the terminals of the unit).
 - by programming the temperature.

D.1.11 Temperature using resistive probes (C 100)

Sensor	Range of measurement	Resolution	Accuracy/1 year
Pt 50 (α = 3851)	- 220°C + 1,200°C	0.01°C	0.010 % + 0.06°C
Pt 100 (α = 3851)	- 220°C + 1,200°C	0.01°C	0.010 % + 0.05°C
JPt 100 (α = 3916)	- 200°C + 510°C	0.01°C	0.010 % + 0.05°C
Pt 100 (α = 3926)	- 210°C + 850°C	0.01°C	0.010 % + 0.05°C
Pt 200 (α = 3851)	- 220°C + 600°C	0.01°C	0.010 % + 0.12°C
Pt 500 (α = 3851)	- 220°C + 1,200°C	0.01°C	0.010 % + 0.07°C
Pt 1 000 (α = 3851)	- 220°C + 1,200°C	0.01°C	0.010 % + 0.05°C
Ni 100 (α = 618)	- 60°C + 180°C	0.01°C	0.010 % + 0.03°C
Ni 120 (α = 672)	- 40°C + 205°C	0.01°C	0.010 % + 0.03°C
Ni 1 000 (α = 618)	- 60°C + 180°C	0.01°C	0.010 % + 0.03°C
Cu 10 (α = 427)	- 70°C + 150°C	0.01°C	0.010 % + 0.18°C
Cu 50 (α = 428)	- 50°C + 150°C	0.01°C	0.010 % + 0.06°C

For negative temperatures, use the displayed value R and not its absolute value.

Temperature coefficient: < 10 % of the accuracy/°C.

The above accuracy is given for 4 wire connection of the temperature sensor.

Taking into account, also, the intrinsic error of the temperature sensor used and its conditions of use.
Measurement current: 0.25 mA

D.1.12 Additional characteristics in "measurement" (C 50/75/100)

D.1.12.1 Manual or automatic range selection

For the mV, V and Ω functions, with automatic range selection, the unit selects a higher or lower range.

D.1.12.2 Relative measurement

- The relative measurement function is used to:
- program a reference value other than that of the unit (ZERO function),
 - cancel by measurement or programming a constant or interfering value (TARE function).

D.1.12.3 Scale correction

The scale correction function performs a conversion between measured electrical quantities and the physical quantities converted.

D.1.12.4 Linearization

Linearization is used partially to correct errors induced by non linear sensor/converter systems.

D.1.12.5 Statistics

Display of the minimum, maximum and average value and the number of measurement points.
The statistics may be reset to zero.

D.2 "Transmission/simulation" function

Maximum rated voltage in common mode: 60 VDC or VAC.

D.2.1 DC Voltage (C 50/75)

Range	Resolution	Accuracy/1 year	Notes
100 mV	1 μV	0.013% + 3 μV	Output load min = 1 KΩ
2 V	10 μV	0.013% + 20 μV	Output load min = 2 KΩ
20 V	100 μV	0.015% + 200 μV (1)	Output load min = 4 KΩ
50 V (2)	1 mV	0.015% + 2 mV	Output load min = 4 KΩ

(1) Noise: 3 PPM Cal (for 0.1 Hz to 10 Hz); 5 PPM Cal (for 10 Hz to 100 Hz).
(2) The 50V rating is not available on C 50.
Temperature coefficient < 7 ppm/°C from 0°C to 18°C and from 28°C to 50 °C.
Settling time: < 5 ms.

D.2.2 DC Current (C 50/75)

Range	Resolution	Accuracy/1 year	Notes
24 mA	1 μA	0.0175% + 2 μA	
4-20 mA	1 μA	0.0175% + 2 μA	
0-20 mA	1 μA	0.0175% + 2 μA	

Temperature coefficient < 10 ppm/°C from 0°C to 18°C and from 28°C to 50 °C.
Settling time: < 5 ms.

D.2.3 Resistance (C 50/75)

Range	Resolution	Accuracy/1 year	Notes
40 Ω	1 mΩ	0.014% + 3 mΩ (1) 0.014% + 10 mΩ (2)	(1) Iext = 10 mA (2) Iext = 1 mA
400 Ω	10 mΩ	0.014% + 20 mΩ 0.014% + 30 mΩ	(1) Iext from 1 to 10 mA (2) Iext from 0.1 to 1 mA
4000 Ω	100 mΩ	0.014% + 300 mΩ	Iext from 0.1 to 1 mA

Temperature coefficient < 5 ppm/°C from 0°C to 18°C and from 28°C to 50 °C.
Settling time: < 1 ms.

D.2.4 Temperature by thermocouples (C 50/75)

- Sensor types:
- in accordance with CEI 584-1/1995 (couples K, T, J, E, S, B, N),
 - in accordance with Din 43710 (couples U and L),
 - in accordance with the HOSKINS tables (couple C),
 - in accordance with the ENGELHARD table (platinum couple).

Sensor	Measuring range	Resolution	Drift / year
K	-240 to -50°C	0.2°C	0.60°C
	-50 to 0°C	0.1°C	0.10°C

K	+0 to +1,372°C	0.05°C	0.013 % +0.08°C
T	-240 to -100°C -100 to 0°C +0 to +400°C	0.2°C 0.05°C 0.05°C	0.40°C 0.10°C 0.013 % +0.08°C
J	-210 to 0°C +0 to +1,200°C	0.05°C 0.05°C	0.20°C 0.013 % +0.07°C
E	-240 to -100°C -100 to +40°C +40 to +1,000°C	0.1°C 0.1°C 0.05°C	0.25°C 0.10°C 0.013 % +0.05°C
R	-50 to +350°C +350 to +900°C +900 to +1,768°C	0.5°C 0.2°C 0.1°C	0.5°C 0.013 % +0.35°C 0.013 % +0.2°C
S	-50 to +120°C +120 to +450°C +450 to +1,768°C	0.5°C 0.2°C 0.1°C	0.8°C 0.013 % +0.35°C 0.013 % +0.25°C
B	+400 to +850°C +850 to +1,820°C	0.2°C 0.1°C	0.013 % +0.4°C 0.013 % +0.2°C
U	-200 to 600°C	0.05°C	0.15°C
L	-200 to +900°C	0.05°C	0.20°C
C	-20 to +900°C +900 to +2,310°C	0.1°C 0.1°C	0.25°C 0.013 % +0.15°C
N	-240 to -190°C -190 to -110°C -110 to 0°C +0 to +1,300°C	0.2°C 0.1°C 0.05°C 0.05°C	0.3°C 0.15°C 0.08°C 0.013 % +0.06°C
Platinum	-100 to +1,400°C	0.05°C	0.3°C
Mo	0 to +1,375°C	0.05°C	0.013 % +0.06°C
NiMo/NiCo	-50 to +1,410°C	0.05°C	0.013 % +0.30°C

The precision is guaranteed for a reference junction temperature of 0 °C.

When using the internal reference junction (except couple B) add an additional uncertainty of 0.3 °C at 0 °C. For other temperatures, account must be taken of the sensitivity of the thermocouple to the temperature (T) in question, giving an additional uncertainty of 0.3 °C * S(0 °C)/S(T).

- Temperature coefficient: < 10 % of the accuracy/°C.
- Display in °C, °F and K.
- It is possible, to choose by programming the position of the cold junction with the keyboard (does not apply to thermocouple B):
 - external at 0°C,
 - internal (compensation for the temperature of the terminals of the unit).
 - by programming the temperature.

D.2.5 Temperature by resistive probes (C 50/75)

Sensor	Range of measurement	Resolution	Accuracy/1 year
Pt 50 ($\alpha = 3851$)	- 220°C + 1,200°C	0.03°C	0.014% + 0.18°C
Pt 100 ($\alpha = 3851$)	- 220°C + 1,200°C	0.02°C	0.014% + 0.12°C
JPt 100 ($\alpha = 3916$)	- 200°C + 510°C	0.02°C	0.014% + 0.12°C
Pt 100 ($\alpha = 3926$)	- 210°C + 850°C	0.02°C	0.014% + 0.12°C
Pt 200 ($\alpha = 3851$)	- 220°C + 600°C	0.10°C	0.014% + 0.33°C
Pt 500 ($\alpha = 3851$)	- 220°C + 1,200°C	0.03°C	0.014% + 0.18°C
Pt 1 000 ($\alpha = 3851$)	- 220°C + 1,200°C	0.02°C	0.014% + 0.08°C
Ni 100 ($\alpha = 618$)	- 60°C + 180°C	0.01°C	0.014% + 0.08°C
Ni 120 ($\alpha = 672$)	- 40°C + 205°C	0.01°C	0.014% + 0.08°C
Ni 1 000 ($\alpha = 618$)	- 60°C + 180°C	0.01°C	0.014% + 0.08°C
Cu 10 ($\alpha = 427$)	- 70°C + 150°C	0.01°C	0.014% + 0.10°C
Cu 50 ($\alpha = 428$)	- 50°C + 150°C	0.03°C	0.014% + 0.15°C

For negative temperatures, use the value displayed R and not its absolute value.

- Temperature coefficient: < 10 % of the accuracy/°C.
- The above accuracy is given for 4 wire connection of the temperature sensor.
- Taking into account, also, the intrinsic error of the temperature sensor used and its conditions of use.
- Measurement current: from 0.1 mA to 1 mA
- Settling time: < 1 ms

D.2.6 Frequency and pulses (C 50/75/100)

Range	Resolution	Accuracy / 1 year	Notes
1000 Hz	0.01 Hz	0.005%	(1)
10 kHz	0.1 Hz	0.005%	(1)

(1) Note that the captured value may differ from the displayed value. The frequency generated is derived from a fixed frequency by dividing it by a whole number. The displayed value (within the resolution of the display) is, therefore, this value recalculated with the fastest approximation to the captured value. The frequency actually generated is the displayed value to within the uncertainty specified in this table.

Temperature coefficient < 5 ppm/°C from 0°C to 18°C and from 28°C to 50 °C.

D.2.7 DC Voltage (C 100)

Range	Resolution	Accuracy/1 year	Notes
100mV	1 μ V	0.010% + 3 μ V	Output load min = 1 K Ω
2V	10 μ V	0.010% + 20 μ V	Output load min = 2 K Ω

20V	100 μ V	0.012% + 200 μ V (1)	Output load min = 4 K Ω
50V	1 mV	0.012% + 2 mV	Output load min = 4 K Ω

(1) Noise: 3 PPM Cal (for 0.1 Hz to 10 Hz); 5 PPM Cal (for 10 Hz to 100 Hz).
 Temperature coefficient < 7 ppm/°C from 0°C to 18°C and from 28°C to 50 °C.
 Settling time: < 5 ms.

D.2.8 DC Current (C 100)

Range	Resolution	Accuracy/1 year	Notes
24 mA	1 μ A	0.012% + 2 μ A	
4-20 mA	1 μ A	0.012% + 2 μ A	
0-20 mA	1 μ A	0.012% + 2 μ A	

Temperature coefficient < 10 ppm/°C from 0°C to 18°C and from 28°C to 50 °C.
 Settling time: < 5 ms.

D.2.9 Resistance (C 100)

Range	Resolution	Accuracy/1 year	Notes
40 Ω	1 m Ω	0.012% + 3 m Ω (1) 0.012% + 10 m Ω (2)	(1) Iext =10 mA (2) Iext =1 mA
400 Ω	10 m Ω	0.012% + 20 m Ω (1) 0.012% + 30 m Ω (2)	(1) Iext from 1 to 10 mA (2) Iext from 0.1 to 1 mA
4000 Ω	100 m Ω	0.012% + 300 m Ω	Iext from 0.1 to 1 mA

Temperature coefficient < 5 ppm/°C from 0°C to 18°C and from 28°C to 50 °C.
 Settling time: < 1 ms.

D.2.10 Temperature by thermocouples (C 100)

Sensor types:
 - in accordance with CEI 584-1/1995 (couples K, T, J, E, S, B, N),
 - in accordance with Din 43710 (couples U and L),
 - in accordance with the HOSKINS tables (couple C),
 - in accordance with the ENGELHARD table (platinum couple).

Sensor	Measuring range	Resolution	Drift / year
K	-240 to -50°C	0.2°C	0.50°C
	-50 to 0°C	0.1°C	0.09°C
	+0 to +1,372°C	0.05°C	0.013 % + 0.07°C
T	-240 to -100°C	0.2°C	0.35°C
	-100 to 0°C	0.05°C	0.09°C
	+0 to +400°C	0.05°C	0.010 % + 0.08°C
J	-210 to 0°C	0.05°C	0.18°C
	+0 to +1,200°C	0.05°C	0.010 % + 0.07°C
E	-240 to -100°C	0.1°C	0.20°C
	-100 to +40°C	0.1°C	0.09°C
	+40 to +1,000°C	0.05°C	0.010 % + 0.05°C
R	-50 to +350°C	0.5°C	0.45°C
	+350 to +900°C	0.2°C	0.010 % + 0.35°C
	+900 to +1,768°C	0.1°C	0.010 % + 0.2°C
S	-50 to +120°C	0.5°C	0.70°C
	+120 to +450°C	0.2°C	0.010 % + 0.35°C
	+450 to +1,768°C	0.1°C	0.010 % + 0.25°C
B	+400 to +850°C	0.2°C	0.010 % + 0.4°C
	+850 to +1,820°C	0.1°C	0.010 % + 0.2°C
U	-200 to 600°C	0.05°C	0.13°C
L	-200 to +900°C	0.05°C	0.17°C
C	-20 to +900°C	0.1°C	0.23°C
	+900 to +2,310°C	0.1°C	0.010 % + 0.15°C
N	-240 to -190°C	0.2°C	0.25°C
	-190 to -110°C	0.1°C	0.13°C
	-110 to 0°C	0.05°C	0.08°C
	+0 to +1,300°C	0.05°C	0.010 % + 0.06°C
Platinum	-100 to +1,400°C	0.05°C	0.25°C
Mo	0 to +1,375°C	0.05°C	0.010 % + 0.06°C
NiMo/NiCo	-50 to +1,410°C	0.05°C	0.010 % + 0.30°C

The precision is guaranteed for a reference junction temperature of 0 °C.
 When using the internal reference junction (except couple B) add an additional uncertainty of 0.2 °C at 0 °C. For other temperatures, account must be taken of the sensitivity of the thermocouple to the temperature (T) in question, giving an additional uncertainty of 0.2 °C * S(0 °C)/S(T).

- Temperature coefficient: < 10 % of the accuracy/°C.
- Display in °C, °F and K.
- It is possible, to choose by programming the position of the cold junction with the keyboard (does not apply to thermocouple B):
 - external at 0°C,
 - internal (compensation for the temperature of the terminals of the unit).
 - by programming the temperature.

D.2.11 Temperature by resistive probes (C 100)

Sensor	Range of measurement	Resolution	Accuracy/1 year
Pt 50 ($\alpha = 3851$)	- 220°C + 1 200°C	0.03°C	0.012 % + 0.18°C
Pt 100 ($\alpha = 3851$)	- 220°C + 1 200°C	0.02°C	0.012 % + 0.12°C
JPt 100 ($\alpha = 3916$)	- 200°C + 510°C	0.02°C	0.012 % + 0.12°C

Pt 100 ($\alpha = 3926$)	- 210°C + 850°C	0.02°C	0.012 % + 0.12°C
Pt 200 ($\alpha = 3851$)	- 220°C + 600°C	0.10°C	0.012 % + 0.33°C
Pt 500 ($\alpha = 3851$)	- 220°C + 1 200°C	0.03°C	0.012 % + 0.18°C
Pt 1 000 ($\alpha = 3851$)	- 220°C + 1 200°C	0.02°C	0.012 % + 0.08°C
Ni 100 ($\alpha = 618$)	- 60°C + 180°C	0.01°C	0.012 % + 0.08°C
Ni 120 ($\alpha = 672$)	- 40°C + 205°C	0.01°C	0.012 % + 0.08°C
Ni 1 000 ($\alpha = 618$)	- 60°C + 180°C	0.01°C	0.012 % + 0.08°C
Cu 10 ($\alpha = 427$)	- 70°C + 150°C	0.01°C	0.012 % + 0.10°C
Cu 50 ($\alpha = 428$)	- 50°C + 150°C	0.03°C	0.012 % + 0.15°C

For negative temperatures, use the value displayed R and not its absolute value.

- Temperature coefficient: < 10 % of the accuracy/°C.
- The above accuracy is given for 4 wire connection of the temperature sensor.
- Taking into account, also, the intrinsic error of the temperature sensor used and its conditions of use.
- Measurement current: from 0.1 mA to 1 mA
- Settling time: < 1 ms

Type of sensors:

- Pt 10ohm, 50ohm, 100ohm, 200ohm, 500ohm, 1,000ohm with $\alpha = 3851$ as per CEI 751/1995
- Pt 100ohm with $\alpha = 3916$ as per JIS C 1604/1989
- Pt 100ohm with $\alpha = 3926$ as per EIT90
- Ni 100ohm, 1,000ohm with $\alpha = 618$ as per DIN 43760
- Ni 120ohm with $\alpha = 672$ as per MIL-T-24388C
- Cu 10ohm with $\alpha = 427$ as per MINCO 16/9
- Cu 50ohm with $\alpha = 428$ as per OIML R 84

D.2.12 Additional characteristics in simulation (C 50/75/100)

D.2.1.1 Generation of increments

The increment generation function is used to program an incremental progression of the active transmission function.

D.2.1.2 Generation of ramps

The ramp generation function is used to program a linear variation of the active transmission function.

D.2.1.3 Synthesizer

The Synthesizer function is used:

- to store up to 100 transmission values in permanent memory,
- to recall and transmit manually or automatically the contents of these memories.

D.2.1.4 Scale correction

The scale correction function performs a conversion between the physical quantities displayed and the electrical quantities simulated.

Wahl Instruments, Inc.
 234 Old Weaverville Road
 Asheville, NC 28804
 Toll Free 800-421-2853
 Phone 828-658-3131
 Fax 828-658-0728
www.palmerwahl.com
 Register your product at:
www.palmerwahl.com/register